

SONY®

FM/AM Compact Disc Player

Operating Instructions _____

EN

Owner's Record

The model and serial numbers are located on the bottom of the unit.
Record the serial number in the space provided below.
Refer to these numbers whenever you call upon your Sony dealer regarding this product.

Model No. CDX-C660 Serial No. _____

For installation and connections, see the supplied installation/connections manual.

COMPACT
disc
DIGITAL AUDIO

CDX-C660

© 1997 by Sony Corporation

Warning

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

CAUTION

The use of optical instruments with this product will increase eye hazard.

Welcome !

Thank you for purchasing the Sony Compact Disc Player. This unit lets you enjoy a variety of features by using either a supplied rotary remote or an optional wireless remote.

In addition to the CD playback and radio operations, you can expand your system by connecting an optional CD/MD changer.

Table of Contents

This Unit Only

Getting Started

Resetting the unit	4
Detaching the front panel	4
Preparing the rotary remote	4
Setting the clock	5

CD Player

Listening to a CD	5
Playing a CD in various modes	6
Creating a program	
— CD Program Memory	7

Radio

Memorizing stations automatically	
— Best Tuning Memory (BTM)	9
Memorizing only the desired stations	9
Receiving the memorized stations.....	10
Storing the station names	
— Station Memo	10
Locating a station by name	
— List-up	11

Other Functions

Using the rotary remote	11
Adjusting the sound characteristics	13
Muting the sound	13
Changing the sound and display settings	13

With Optional Equipment

CD/MD Changer

Playing a CD or MD	14
Scanning the tracks	
— Intro Scan	15
Playing tracks repeatedly	
— Repeat Play	15
Playing tracks in random order	
— Shuffle Play	15
Creating a program	
— Program Memory	16
Labeling a CD	
— Disc Memo	18
Locating a disc by name	
— List-up	18
Selecting specific tracks for playback	
— Bank	19

Additional Information

 
Precautions	20
Maintenance	21
Dismounting the unit	21
Location of controls	22
Specifications	24
Troubleshooting guide	25
Index	27

Getting Started

Resetting the unit

Before operating the unit for the first time or after replacing the car battery, you must reset the unit.

Press the reset button with a pointed object, such as a ball-point pen.



Reset button


Notes

- Pressing the reset button will erase the clock and some memorized functions.
- When you connect the power supply cord to the unit or reset the unit, wait for about 10 seconds before you insert a disc. If you insert a disc within these 10 seconds, the unit will not be reset, and you will have to press the reset button again.

Detaching the front panel

You can detach the front panel of this unit to prevent the unit from being stolen.

- 1 Press **OFF**.
- 2 Press **RELEASE** to open up the front panel. Then slide the front panel a little to the left, and pull it off towards you.

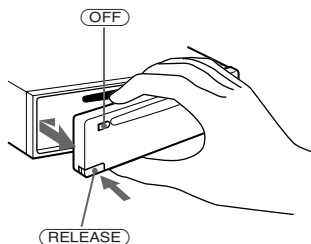


Notes

- Be sure not to drop the panel when detaching it from the unit.
- If you press **RELEASE** to detach the panel while the unit is still on, the unit will turn off automatically to prevent the speakers from being damaged.
- When you carry the front panel with you, put it in the supplied front panel case.

Attaching the front panel

Align part **A** of the front panel to part **B** of the unit as illustrated, and push until it clicks.

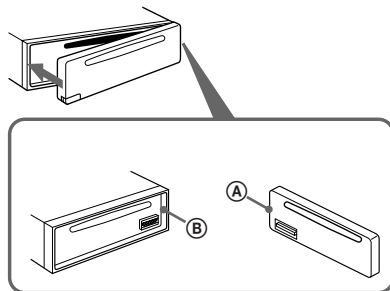

Notes


- Be sure not to attach the front panel upside down.
- Do not press the front panel hard against the unit when attaching it. Press it lightly against the unit.
- Do not press hard or put excessive pressure on the display windows of the front panel.
- Do not expose the front panel to direct sunlight, heat sources such as hot air ducts, and do not leave it in a humid place. Never leave it on the dashboard of a car parked in direct sunlight where there may be a considerable rise in temperature.

Caution alarm

If you turn the ignition key switch to the OFF position without removing the front panel, the caution alarm will beep for a few seconds (only when the POWER SELECT switch is set to the **A** position).

Preparing the rotary remote

When you mount the rotary remote, attach the label in the illustration below.

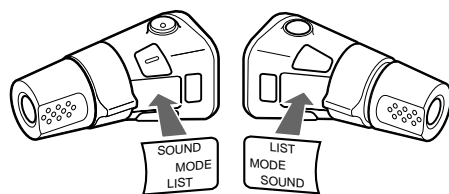


Setting the clock


The clock uses a 12-hour digital indication.

Example: Set the clock to 10:08

 - 1 Press **(SHIFT)**, then press **(2)** (SET UP).



- 1 Press **(4)** (→).

 

The hour digit flashes.

- 2 Set the hour.

 


to go backward

to go forward



- 3 Press **(4)** (→).




The minute digits flash.

- 4 Set the minute.




to go backward

 to go forward



- 2 Press **(SHIFT)**.

 

The clock starts.

- 3 Press **(SHIFT)**.

After the mode setting is complete, the display goes back to normal playback mode.

Note


If the POWER SELECT switch on the bottom of the unit is set to the **(3)** position, turn the power on first, then set the clock.

CD Player

Listening to a CD


Simply insert the CD.
Playback starts automatically.

Labelled side up

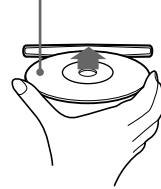

If a CD is already inserted, press **(SOURCE)** repeatedly until "CD" appears.

 Elapsed playing time



Track number

Note

To play back an 8 cm CD, use the optional Sony compact disc single adapter (CSA-8).

To	Press
----	-------

Stop playback	(▲) or (OFF)
---------------	----------------------------

Eject the CD	(▲)
--------------	------------

Changing the displayed item

Each time you press **(DSPL)**, the item changes as follows:

Elapsed playback time ↔ Clock

EN

Getting Started/CD Player

Locating a specific track

— Automatic Music Sensor (AMS)

During playback, press either side of (SEEK/AMS) momentarily.



To locate succeeding tracks



To locate preceding tracks

Locating a specific point in a track

— Manual Search

During playback, press and hold either side of (SEEK/AMS). Release the button when you have found the desired point.



To search forward



To search backward

Note

If “LLLL” or “TTTT” appears in the display, that means you have reached the beginning or the end of the disc and you cannot go any further.

Playing a CD in various modes

You can play CDs in various modes:

 
- Intro (Intro Scan) lets you play the first 10 seconds of all the tracks.
- Repeat (Repeat Play) repeats the current track.
- Shuf (Shuffle Play) plays all the tracks in random order.

Searching for the desired track

— Intro scan

1 Press (SHIFT).


Every time you press (SHIFT), only the items you can select light up.



2 Press (3) (PLAY MODE) repeatedly until “Intro” appears.

Each time you press (3) (PLAY MODE), the item changes as follows:

 Intro ↔ PGM



3 Press (4) (→) to select “Intro on.”



Intro Scan starts.

4 Press (SHIFT).

 
To go back to normal playback mode, select “Intro off” in step 3 above.

Playing tracks repeatedly

— Repeat Play

1 During playback, press (SHIFT).

2 Press (6) (REP) repeatedly until “Repeat 1” appears.



Repeat Play starts.

3 Press (SHIFT).

 
To go back to normal playback mode, select “Repeat off” in step 2 above.

Playing tracks in random order

— Shuffle Play

1 During playback, press (SHIFT).

2 Press (7) (SHUF) repeatedly until “Shuf 1” appears.



Shuffle Play starts.

3 Press (SHIFT).

To go back to normal playback mode, select “Shuf off” in step 2 above.

Creating a program

— CD Program Memory

You can play the tracks in the order you want by making your own program. You can make two programs: Program 1 and Program 2. You can select up to 12 tracks for each program. You can store the programs in memory.

- 1 Press **(SHIFT)**, then press **(3)** (PLAY MODE) for two seconds.

 


"P 1" shows Program 1 is selected.

To select Program 2, press **(4)** (→) repeatedly until "P 2" appears.

- 2 Press either side of **(SEEK/AMS)** to select the track you want.

- 3 Press **(5)** (ENTER) momentarily.



- 4 To continue entering tracks, repeat steps 2 and 3.

- 5 When you finish selecting tracks, press **(3)** (PLAY MODE) for two seconds.

- 6 Press **(SHIFT)**.

Notes

- *"*Wait*" appears in the display while the unit is reading the data.*
- *"*Mem Full*" appears in the display when you try to enter more than 12 tracks into a program.*

Playing the stored program

You can select:

 
- PGM 1 to play Program 1.
- PGM 2 to play Program 2.
- PGM 1+2 to play Programs 1 and 2.

- 1 Press **(SHIFT)**.


- 2 Press **(3)** (PLAY MODE) repeatedly until "PGM" appears.

- 3 Press **(4)** (→) repeatedly until the desired program appears.


Program 1 playback




Program 2 playback

 

Programs 1 and 2 playback

 

Normal playback

 

Program Play starts.

- 4 Press **(SHIFT)**.

To go back to normal playback mode, select "PGM off" in step 3 above.

Note

"NO Data" appears in the display if no track is stored in the program.

Erasing an entire program

- 1 Press **(SHIFT)**, then press **(3)** (PLAY MODE) for two seconds.



 
"P 1" shows Program 1 is selected.

- 2 Press **(1)** (←) repeatedly until "DEL" appears.



To delete Program 2, press **(4)** (→) repeatedly until "PGM 2" appears.

- 3 Press **(5)** (ENTER) for two seconds.



The entire program is erased.

- 4 When you finish erasing programs, press **(3)** (PLAY MODE) for two seconds.

- 5 Press **(SHIFT)**.

Adding tracks to a program

 
- 1 Press **(SHIFT)**, then press **(3)** (PLAY MODE) for two seconds.



"P 1" shows Program 1 is selected.

To select Program 2, press **(4)** (→) repeatedly until "P 2" appears.

- 2 Press **(1)** (←) or **(4)** (→) to select the track slot number where you want to insert a track.



- 3 Press either side of **(SEEK/AMS)** to select the track you want to insert.

- 4 Press **(5)** (ENTER) momentarily to enter the track.

The current track in that slot number and the succeeding tracks shift down.

- 5 To continue inserting tracks, repeat steps 2 through 4.

Note

 
Once all 12 slots have been filled, "*Mem Full*" appears in the display, and you cannot insert tracks.

- 6 When you finish inserting tracks, press **(3)** (PLAY MODE) for two seconds.

- 7 Press **(SHIFT)**.

Erasing tracks in a program

- 1 Press **(SHIFT)**, then press **(3)** (PLAY MODE) for two seconds.




"P 1" shows Program 1 is selected.

To select Program 2, press **(4)** (→) repeatedly until "P 2" appears.

- 2 Press **(1)** (←) or **(4)** (→) to select the track you want to erase.

 
Track slot number



The track currently registered in slot 6 of Program 1.

- 3 Press **(5)** (ENTER) for two seconds.

 When you erase a track from a slot number, the succeeding tracks shift up to fill the gap.



- 4 To continue erasing tracks, repeat steps 2 and 3.

- 5 When you finish erasing tracks, press **(3)** (PLAY MODE) for two seconds.

- 6 Press **(SHIFT)**.

Memorizing stations automatically

— Best Tuning Memory (BTM)

 
The unit selects the stations with the strongest signals and memorizes them in the order of their frequencies. You can store up to 10 stations on each band (FM1, FM2 and AM).

Caution

When tuning in stations while driving, use Best Tuning Memory to prevent accidents.

- 1 Press **(SOURCE)** repeatedly to select the tuner.
Each time you press **(SOURCE)**, the source changes as follows:
CD ↔ TUNER

- 2 Press **(MODE)** repeatedly to select the band.
Each time you press **(MODE)**, the band changes as follows:



- 3 Press **(SHIFT)**, then press **(3)** (PLAY MODE) repeatedly until "B.T.M" appears.
- 4 Press **(4)** (→).
The unit stores stations in the order of their frequencies on the number buttons.
A beep sound and the setting is stored.
- 5 Press **(SHIFT)**.

Notes

- The unit does not store stations with weak signals. If only a few stations are received, some number buttons will retain their former setting.
- When a number is indicated in the display, the unit starts storing stations from the one currently displayed.

Memorializing only the desired stations

You can store up to 10 stations on each band (20 for FM1 and FM2, 10 for AM) in the order of your choice.

- 1 Press **(SOURCE)** repeatedly to select the tuner.
- 2 Press **(MODE)** repeatedly to select the band (FM1, FM2 or AM).
- 3 Press either side of **(SEEK/AMS)** to tune in the station you want to store on the number button.
- 4 Keep the desired number button (**(1)** to **(10)**) pressed for two seconds until "MEM" appears.
The number button indication appears in the display.

Note

If you try to store another station on the same number button, the previously stored station will be erased.

Receiving the memorized stations

- 1 Press **(SOURCE)** repeatedly to select the tuner.
- 2 Press **(MODE)** repeatedly to select the band (FM1, FM2 or AM).
- 3 Press the number button (**(1)** to **(10)**) momentarily where the desired station is stored.

If you cannot tune in a preset station

Press either side of **(SEEK/AMS)** momentarily to search for the station (automatic tuning).

Scanning stops when the unit receives a station. Press either side of **(SEEK/AMS)** repeatedly until the desired station is received.

Note

If the automatic tuning stops too frequently, press **(SHIFT)**, then press **(3)** (**PLAY MODE**) repeatedly until "Local" (local seek mode) is displayed. Then press **(4)** (**→**) to select "Local on." Press **(SHIFT)**. Only the stations with relatively strong signals will be tuned in.

Tip

If you know the frequency of the station you want to listen to, press and hold either side of **(SEEK/AMS)** for two seconds until the desired frequency appears (manual tuning).

If FM stereo reception is poor — Monaural Mode

- 1 Press **(SHIFT)**, then press **(3)** (**PLAY MODE**) repeatedly until "Mono" appears.
- 2 Press **(4)** (**→**) repeatedly until "Mono on" appears.
The sound improves, but becomes monaural ("ST" disappears).
- 3 Press **(SHIFT)**.

To go back to normal mode, select "Mono off" in step 2 above.

Changing the displayed items

Each time you press **(DSPL)**, the item changes as follows:

Frequency ↔ Clock

 
Storing the station names

—Station Memo

You can assign a name to each radio station and store it in memory. The name of the current station appears in the display. You can store up to eight characters for each station.

Storing the station names

- 1 Tune in a station whose name you want to store.
- 2 Press **(LIST)** for two seconds.




- 3 Enter the characters.
 - 1 Rotate the dial clockwise to select the desired characters.
(A → B → C → ... Z → 0 → 1 → 2 → ... 9 → + → - → * → / → \ → > → < → . → _)



If you rotate the dial counterclockwise, the characters appear in the reverse order.

If you want to put a blank space between characters, select "_" (under-bar).

 - 2 Press **(4)** (**→**) after locating the desired character.
The flashing cursor moves to the next space.



If you press **(1)** (**←**), the flashing cursor moves to the left.

- 3 Repeat steps **1** and **2** to enter the entire name.

 
- 4 To return to normal radio reception, press **(LIST)** for two seconds.

Tip

To erase/correct a name, enter "_" (under-bar) for each character.

Displaying the station name

Press **(DSPL)** during radio reception.



Each time you press **(DSPL)**, the item changes as follows:



* If the station name is not stored, "NO Name" appears in the display for one second.

Erasing the station name

- 1 Tune in any station and press **(LIST)** for two seconds.
- 2 Press **(DSPL)** for two seconds. "Delete" and the station name appear in the display.
- 3 Rotate the dial to select the name you want to erase.
- 4 Press **(5)** (**ENTER**) for two seconds. The name is erased. Repeat steps 3 and 4 if you want to erase other names.
- 5 Press **(LIST)** for two seconds. The unit returns to normal radio reception mode.

Locating a station by name — List-up

- 1 Press **(LIST)** momentarily. The name assigned to the current station appears in the display.
- 2 Press **(LIST)** repeatedly until you find the desired station.
- 3 Press **(5)** (**ENTER**) to tune in the desired station.

Note


After the station name or frequency has been displayed for five seconds, the display goes back to normal mode. To turn off the display, press **(DSPL)**.

Other Functions

Using the rotary remote

The rotary remote works by pressing buttons and/or rotating controls. You can control an optional CD or MD changer with the rotary remote.

By pressing buttons (the SOURCE and MODE buttons)

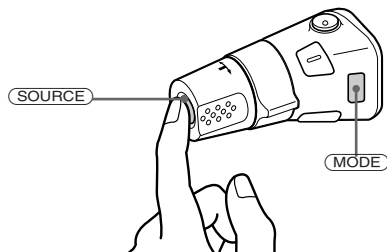

Each time you press **(SOURCE)**, the source changes as follows:
TUNER → CD → MD


Pressing **(MODE)** changes the operation in the following ways;

- Tuner: FM1 → FM2 → AM
- CD changer: CD1 → CD2 → ...
- MD changer: MD1 → MD2 → ...

Tip

When the **POWER SELECT** switch is set to position **B**, you can turn on this unit by pressing **(SOURCE)** on the rotary remote.


By rotating the control (the SEEK/AMS control)

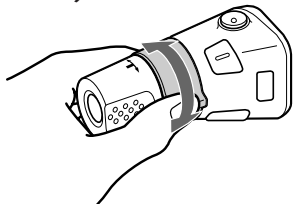

Rotate the control momentarily and release it to:

- Locate a specific track on a disc. Rotate and hold the control until you locate the specific point in a track, then release it to start playback.
- Tune in stations automatically. Rotate and hold the control to tune in a specific station.

By pushing in and rotating the control (the PRESET/DISC control)

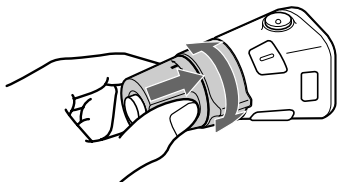


Push in and rotate the control to:

- Receive the stations memorized on the number buttons.
- Change the disc.

Other operations


Rotate the VOL control to adjust the volume.

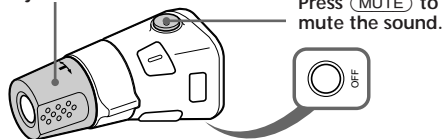

Press **(MUTE)** to mute the sound.

Press **(OFF)** to turn off the unit.

Press **(SOUND)** to adjust the volume and sound menu.

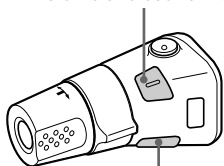


Press **(LIST)** to display memorized names.

Changing the operative direction


The operative direction of controls is factory-set as in the illustration below.

To increase

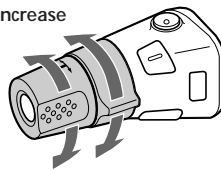

To decrease

If you need to mount the rotary remote on the right side of the steering column, you can reverse the operative direction.

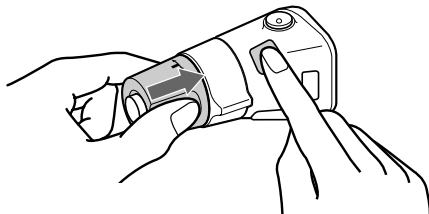

Press **(SOUND)** for two seconds while pushing the VOL control.

Tip

You can control the operative direction of controls with the unit (page 13).

Adjusting the sound characteristics

You can adjust the bass, treble, balance and fader.

Each source can store the bass and treble levels respectively.

- 1 Select the item you want to adjust by pressing **(SOUND)** repeatedly.

VOL (volume) → BAS (bass) → TRE (treble) → BAL (balance) → FAD (fader)

- 2 Adjust the selected item by rotating the dial.

Adjust within three seconds after selecting the item. (After three seconds, the dial functions work as the volume control.)

Muting the sound

Press **(MUTE)** on the rotary remote or wireless remote.

"Mute on" flashes momentarily.

To restore the previous volume level, press **(MUTE)** again.

Tip

The unit decreases the volume automatically when a telephone call comes in (Telephone mute function).

Changing the sound and display settings

You can set:

- Clock (page 5).
- D.Info (Dual Information) to display the clock and the play mode at the same time (ON) or to display the information alternately (OFF).
- Amber/Green to change the illumination color to amber or green.
- Dimmer to change the brightness of the display.
 - Select "Auto" to dim the display only when you turn the lights on.
 - Select "on" to dim the display.
- Contrast to adjust the contrast if the indications in the display are not recognizable because of the unit's installed position.
- Beep to turn on or off the beeps.
- RM (Rotary Remote) to change the operative direction of the controls of the rotary remote.
 - Select "norm" to use the rotary remote as the factory preset position.
 - Select "rev" when you mount the rotary remote on the right of the steering column.
- Loud (Loudness) to enjoy bass and treble even at low volume. The bass and treble will be reinforced.
- A.Scrl (Auto Scroll) (page 14).

- 1 Press **(SHIFT)**.

- 2 Press **(2)** (SET UP) repeatedly until the desired item appears.

Each time you press **(2)** (SET UP), the item changes as follows:

Clock → D.Info* → Amber/Green → Dimmer → Contrast → Beep → RM → Loud* → A.Scrl*

* When you have not tune the station or there is no CD/MD being played, these items will not appear.

Note

The displayed item will differ depending on the source.

- 3 Press **(4)** (→) to select the desired setting (for example: on or off).
For the "Contrast" setting, pressing **(4)** (→) makes the contrast higher, and pressing **(1)** (←) makes the contrast lower.

- 4 Press **(SHIFT)**.

After the mode setting is complete, the display goes back to normal playback mode.

With Optional Equipment CD/MD Changer

You can control up to 7 CD and MD changers with this unit.


Playing a CD or MD

- 1 Press **(SOURCE)** repeatedly to select the CD or MD.
- 2 Press **(MODE)** until the desired changer appears.
CD/MD playback starts.

When a CD or MD changer is connected, all the tracks play from the beginning.

Changing the displayed item

Each time you press **(DSPL)** during CD/MD playback, the item changes as follows:

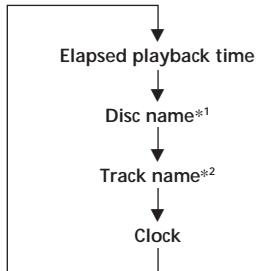

*1 If you have not labeled the disc, "NO D.Name" appears in the display.

*2 If the track name of an MD is not prerecorded, "NO T.Name" appear in the display

Tip

If the name of the MD is too long, you can scroll it across the display by pressing **(SHIFT)**, then **(1) (←)**.

Automatically scrolling a disc name — Auto Scroll

If the disc name or track name on an MD exceeds 10 characters and the Auto Scroll function is on, automatically scrolls on the display as follows:

- The disc name appears when the disc has changed (if the disc name is selected).
- The track name appears when the track has changed (if the track name is selected).
- The disc or track name appears depending on the setting when you press **(SOURCE)** to select an MD.

If you press **(DSPL)** to change the display item, the disc or track name of the MD is scrolled automatically whether you set the function on or off.

- 1 During playback, press **(SHIFT)**.
- 2 Press **(2) (SET UP)** repeatedly until "A.Scrl" appears.
- 3 Press **(4) (→)** to select "A.Scrl on."
- 4 Press **(SHIFT)**

To cancel Auto Scroll, select "A.Scrl off" in step 2 above.

Displaying the recording date of the current MD

Press **(DSPL)** for two seconds during MD playback.
The recording date of the track is displayed for about three seconds.

Locating a specific track

— Automatic Music Sensor (AMS)

During playback, press either side of **(SEEK/AMS)** once for each track you want to skip.



To locate succeeding tracks



To locate preceding tracks

Locating a specific point in a track

— Manual Search

During playback, press and hold either side of (SEEK/AMS). Release the button when you have found the desired point.



To search forward



To search backward

Locating a disc by disc number

— Direct Disc Selection

Press the number button that corresponds with the desired disc number.

The desired disc in the current changer begins playback.

Scanning the tracks

— Intro Scan

You can play the first 10 seconds of all the tracks on the current disc.

1 During playback, press (SHIFT), then press (3) (PLAY MODE) repeatedly until “Intro” appears.

2 Press (4) (→) to select “Intro on.”
Intro Scan starts.

3 Press (SHIFT).

To go back to normal playback mode, select “Intro off” in step 2 above.

Playing tracks repeatedly


— Repeat Play

You can select:

- Repeat 1 to repeat a track.
- Repeat 2 to repeat a disc.
- Repeat 3 to repeat all the discs in the current changer.

1 During playback, press (SHIFT).

2 Press (6) (REP) repeatedly until the desired setting appears.

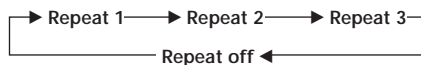

Repeat Play starts.

3 Press (SHIFT).

To go back to normal playback mode, select “Repeat off” in step 2 above.

Note

When you play back a CD on this unit, Repeat 3 has the same function as Repeat 2.

Playing tracks in random order

 
— Shuffle Play

You can select:

- Shuf 1 to play the tracks on the current disc in random order.
- Shuf 2 to play the tracks in the current changer in random order.
- Shuf 3 to play all the tracks in random order.

1 During playback, press (SHIFT).

2 Press (7) (SHUF) repeatedly until the desired setting appears.



Shuffle Play starts.

3 Press (SHIFT).

To go back to normal playback mode, select “Shuf off” in step 2 above.

Creating a program

— Program Memory (CD/MD changer with the program memory function)

You can play tracks in the order you want by making your own program. You can make two programs: Program 1 and Program 2. You can select up to 12 tracks for each program. You can store the programs in memory.

- 1 Press **(SHIFT)**, then press **(3)** (PLAY MODE) for two seconds.

Program edit mode



 
"P 1" shows Program 1 is selected.

If you have labelled the disc, the bank edit mode appears. Press **(3)** (PLAY MODE) to display "P 1" above.

To select Program 2, press **(4)** (→) repeatedly until "P 2" appears.

- 2 Select the track you want.
 - 1 Press **(SOURCE)** repeatedly to select CD or MD.
 - 2 Press **(MODE)** repeatedly to select the changer.
 - 3 Press **(SHIFT)**, then press the number button to select the disc.
 - 4 Press **(SHIFT)**.
 - 5 Press either side of **(SEEK/AMS)** to select the track.

- 3 Press **(5)** (ENTER) momentarily.



- 4 To continue entering tracks, repeat steps 2 and 3.
- 5 When you finish entering tracks, press **(3)** (PLAY MODE) for two seconds.
- 6 Press **(SHIFT)**.

Notes

- "Wait" appears in the display while the unit is reading the data, or when a disc has not been put into the unit.
- "Mem Full" appears in the display when you try to enter more than 12 tracks into a program.

 
Playing the stored program

Changing the disc order in the changer will not affect program memory play.

You can select:

- PGM 1 to play Program 1.
- PGM 2 to play Program 2.
- PGM 1+2 to play Programs 1 and 2.

- 1 Press **(SHIFT)**.
- 2 Press **(3)** (PLAY MODE) repeatedly until "PGM" appears.
- 3 Press **(4)** (→) repeatedly until the desired program appears.



Program Play starts.

- 4 Press **(SHIFT)**.

To go back to normal playback mode, select "PGM off" in step 3 above.

Notes

- If you press the number button during program memory play, program memory play is interrupted, and playback of the selected disc starts.
- "NO Data" appears in the display if no track is stored in the program.
- If a track stored into the program memory is not in the disc magazine, the track will be skipped.
- When the disc magazine contains no tracks stored into the program memory, or when the program information has not been loaded yet, "Not Ready" appears.

Erasing an entire program

- 1 Press **(SHIFT)**, then press **(3)** (PLAY MODE) for two seconds.



"P 1" shows Program 1 is selected.

 
If you have labelled the disc, the bank edit mode appears. Press **(3)** (PLAY MODE) to display "P 1" above.

- 2 Press **(1)** (←) repeatedly until "DEL" appears.



To erase Program 2, press (4) (→) repeatedly until "PGM 2" appears.

- 3 Press (5) (ENTER) for two seconds.



The entire program is erased.

- 4 When you finish erasing programs, press (3) (PLAY MODE) for two seconds.

- 5 Press (SHIFT).

Adding tracks to a program

- 1 Press (SHIFT), then press (3) (PLAY MODE) for two seconds.



"P 1" shows Program 1 is selected.

If you have labelled the disc, the bank edit mode appears. Press (3) (PLAY MODE) to display "P 1" above.

To select Program 2, press (4) (→) repeatedly until "P 2" appears.

- 2 Press (1) (←) or (4) (→) to select the track slot number where you want to insert a track.

Track slot number



- 3 Press either side of (SEEK/AMS) to select the track you want to insert.

- 4 Press (5) (ENTER) momentarily to enter the track.

The current track in that slot number and the succeeding tracks shift down.

To continue inserting tracks, repeat steps 2 through 4.

Note

Once all 12 slots have been filled, "*Mem Full*" appears in the display, and you cannot insert tracks.

- 5 When you finish inserting tracks, press (3) (PLAY MODE) for two seconds.

- 6 Press (SHIFT).

Erasing tracks in a program

- 1 Press (SHIFT), then press (3) (PLAY MODE) for two seconds.



"P 1" shows Program 1 is selected.

If you have labelled the disc, the bank edit mode appears. Press (3) (PLAY MODE) to display "P 1" above.

To select Program 2, press (4) (→) repeatedly until "P 2" appears.

- 2 Press (1) (←) or (4) (→) to select the track you want to erase.

Track slot number



The track currently registered in slot 6 of Program 1.

- 3 Press (5) (ENTER) for two seconds. When you erase a track from a slot number, the succeeding tracks shift up to fill the gap.



- 4 To continue erasing tracks, repeat steps 2 and 3.

- 5 When you finish erasing tracks, press (3) (PLAY MODE) for two seconds.

- 6 Press (SHIFT).

Labeling a CD — Disc Memo

(CD changer with the custom file function)

You can label each disc with a personalized name. You can enter up to eight characters for a disc. If you label a CD, you can locate the disc by name and select the specific tracks for playback (page 19).

- 1 Play the CD and press **(LIST)** for two seconds.



- 2 Enter the characters.

 
- 1 Rotate the dial clockwise to select the desired characters.
(A → B → C → ... Z → 0 → 1 → 2 → ... 9 → + → - → * → / → \ → > → < → . → _)



If you rotate the dial counterclockwise, the characters appear in the reverse order.

If you want to put a blank space between characters, select “_” (under-bar).

- 2 Press **(4)** (→) after locating the desired character.
The flashing cursor moves to the next space.



If you press **(1)** (←), the flashing cursor moves to the left.

- 3 Repeat steps 1 and 2 to enter the entire name.

- 3 To return to normal CD playback mode, press **(LIST)** for two seconds.

Tip

To erase/correct a name enter “_” (under-bar) for each character.

Displaying the disc memo name

Press **(DSPL)** during CD playback.



Each time you press **(DSPL)** during CD playback, the item changes as follows:

Elapsed playback time ↔ Disc name

Erasing the disc memo

- 1 Press **(SOURCE)** repeatedly to select CD.
- 2 Press **(MODE)** repeatedly to select the CD changer.
- 3 Press **(LIST)** for two seconds.
- 4 Press **(DSPL)** for two seconds.
- 5 Rotate the dial to select the name you want to erase.
- 6 Press **(5)** (ENTER) for two seconds.
The name is erased.
Repeat steps 5 and 6 if you want to erase other names.
- 7 Press **(LIST)** for two seconds.
The unit returns to normal CD playback mode.

Locating a disc by name

— List-up (CD changer with the custom file function or MD changer)

You can use this function for discs that have been assigned a custom name. For more information on disc names, refer to “Labeling a CD.”

- 1 Press **(LIST)** momentarily.
The name assigned to the current disc appears in the display.



- 2 Press **(LIST)** repeatedly until you find the desired disc.
- 3 Press **(5)** (ENTER) to play back the disc.

Notes

- After a disc name has been displayed for five seconds, the display goes back to normal playback mode. To turn off the display, press (DSPL).
- The track names are not displayed during MD playback.
- If there are no discs in the magazine, "NO Disc" appears in the display.
- If a disc has not been assigned a custom file, "*****" appears in the display.
- If the disc information has not been read by the unit, "?" appears in the display. To load the disc, first press the number button, then choose the disc that has not been loaded.
- The information appears only in upper case. There are also some letters which cannot be displayed (during MD playback).

Selecting specific tracks for playback

— Bank

(CD changer with the custom file function)

If you label the disc, you can set the unit to skip tracks and play only the tracks you want.

- 1 Start playing the disc and press (SHIFT). Then press (3) (PLAY MODE) for two seconds.

Bank edit mode.



Note

If you have not labeled the disc, the bank edit mode does not appear and the programme edit mode appears. To go back to normal playback mode, press (SHIFT).

- 2 Press either side of (SEEK/AMS) to select the track number you want to skip and press (5) (ENTER).



The indication changes from "Play" to "Skip." If you want to return to "Play," press (5) (ENTER) again.

- 3 Repeat step 2 to set the "Play" or "Skip" mode on all the tracks.

- 4 Press (3) (PLAY MODE) for two seconds. The unit returns to normal CD playback mode.

- 5 Press (SHIFT).

Notes

- You can set the "Play" and "Skip" mode on up to 24 tracks.
- You cannot set the "Skip" mode on all the tracks.

Playing the specific tracks only

You can select:

- Bank on to play the tracks with the "Play" setting.
- Bank inv (Inverse) to play the tracks with the "Skip" setting.

- 1 During playback, press (SHIFT), then press (3) (PLAY MODE) repeatedly until "Bank" appears.

- 2 Press (4) (→) to repeatedly until the desired setting appears.




Playback starts from the track following the current one.

- 3 Press (SHIFT).

To go back to normal playing mode, select "Bank off" in step 2 above.

Additional Information

Do not expose the discs to direct sunlight or heat sources such as hot air-ducts, or leave them in a car parked in direct sunlight where there can be a considerable rise in the temperature inside the car.

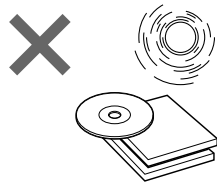

Precautions

- If your car was parked in direct sunlight resulting in a considerable rise in temperature inside the car, allow the unit to cool off before operating it.
- If no power is being supplied to the unit, check the connections first. If everything is in order, check the fuse.
- If no sound comes from the speakers of two-speaker systems, set the fader control to the center position.
- If your car is equipped with a power aerial, it will extend automatically while the unit is operating.

Before playing, clean the discs with an optional cleaning cloth. Wipe each disc from the center out.

Do not use solvents such as benzine, thinner, commercially available cleaners or antistatic spray intended for analog discs.

 


EN


If you have any questions or problems concerning your unit that are not covered in this manual, please consult your nearest Sony dealer.

Notes on handling CDs

A dirty or defective disc may cause sound dropouts while playing. To enjoy optimum sound, handle the disc as follows. Handle the disc by its edge. To keep the disc clean, do not touch the surface.



 Do not stick paper or tape on the labelled surface.



Notes on moisture condensation

On a rainy day or in a very damp area, moisture may condense on the lenses inside the CD player. Should this occur, the unit will not operate properly. In this case, remove the disc and wait for about an hour until the moisture evaporates.


When you play 8 cm CDs

Use the optional Sony compact disc single adapter (CSA-8) to protect the CD player from being damaged.

Maintenance

Fuse replacement

When replacing the fuse, be sure to use one that matches the amperage described on the fuse. If the fuse blows, check the power connection and replace the fuse. If the fuse blows again after replacement, there may be an internal malfunction. In such a case, consult your nearest Sony dealer.

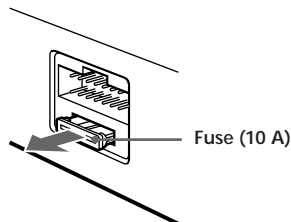


Warning


Never use a fuse with an amperage rating exceeding the one supplied with the unit as this could damage the unit.

Cleaning the connectors

The unit may not function properly if the connectors between the unit and the front panel are not clean. To prevent this, open the front panel by pressing (RELEASE), then detach it and clean the connectors with a cotton swab dipped in alcohol. Do not apply too much force. Otherwise, the connectors may be damaged.

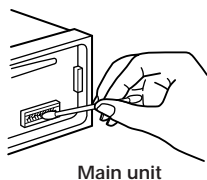


Main unit

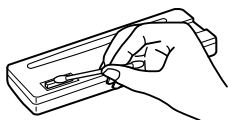


Back of the front panel

Dismounting the unit

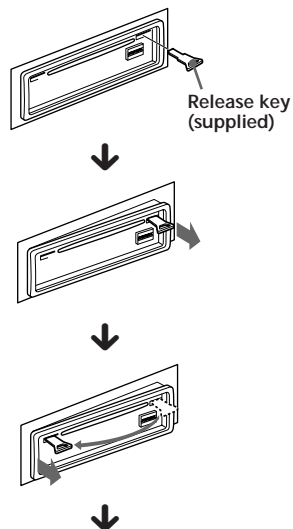


Release key (supplied)

Pull the unit out while the release key is inserted.

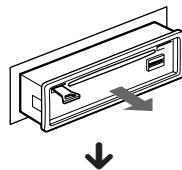


Press the clip inside the front cover with a thin screwdriver, and lever the front cover free.

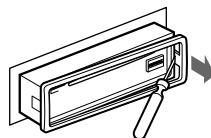

EN

Additional Information

Location of controls

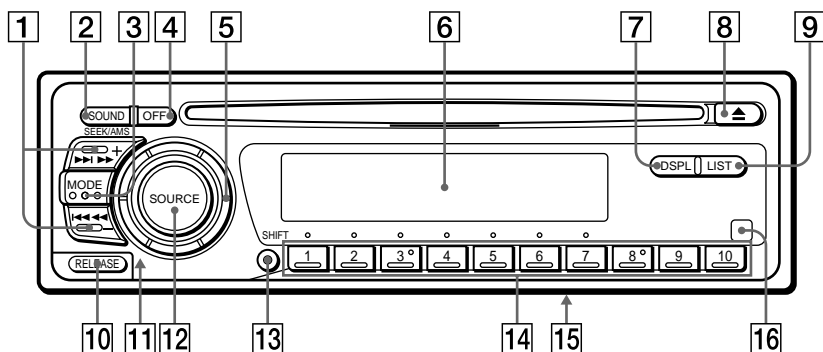


Refer to the pages for details.

EN

- 1 SEEK/AMS (seek/Automatic Music Sensor/manual search) button 6, 7, 8, 9, 10, 14, 15, 16, 17, 19
- 2 SOUND button 13
- 3 MODE (band/changer select) button 9, 10, 14, 16, 18
- 4 OFF button 4, 5
- 5 Dial (volume/bass/treble/balance/fader control) 5, 10, 18
- 6 Display window
- 7 DSPL (display mode change) button 5, 10, 11, 14, 18, 19
- 8 ▲ (eject) button 5
- 9 LIST button
Disc Memo 18
List-up 11, 18
Station memo 10, 11
- 10 RELEASE (front panel release) button 4, 21
- 11 Reset button (located on the front side of the unit behind by the front panel) 4
- 12 SOURCE (source select) button 5, 9, 10, 14, 16, 18
- 13 SHIFT button
PLAY MODE 6, 7, 8, 9, 10, 15, 16, 17, 19
REP 6, 15
SET UP 5, 13, 14
SHUF 6, 15
- 14 During radio reception:
Number buttons 9, 10
During CD/MD playback:
Direct disc selection buttons 15
- 15 POWER SELECT switch (located on the bottom of the unit)
See "POWER SELECT Switch" in the Installation/Connections manual.
- 16 Receptor for the optional wireless remote

Optional wireless remote (RM-X41)

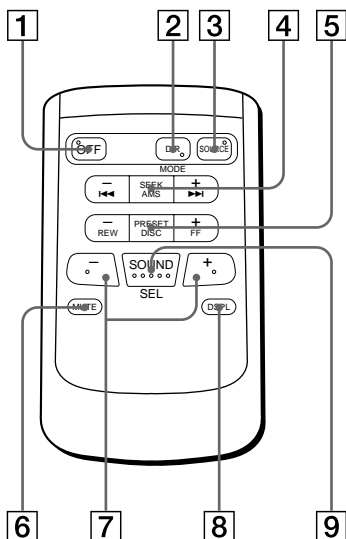

The buttons of the wireless remote work the same functions as those on this unit.

- | | | | |
|---|---|---|---------------|
| 1 | OFF button | 6 | MUTE button |
| 2 | MODE/DIR button
Function as (MODE) on the unit. | 7 | - (+) buttons |
| 3 | SOURCE button | 8 | DSPL button |
| 4 | SEEK/AMS button | 9 | SOUND button |
| 5 | PRESET/DISC button
<i>You cannot do manual search and manual tuning with the remote.</i> | | |

When the POWER SELECT switch is set to the **B** position, the unit cannot be operated with the wireless remote unless (SOURCE) on the unit is pressed or a CD is inserted to activate the unit first.

Specifications

AUDIO POWER SPECIFICATIONS

POWER OUTPUT AND TOTAL HARMONIC DISTORTION

17 watts per channel minimum continuous average power into 4 ohms, 4 channels driven from 20 Hz to 20 kHz with no more than 1 % total harmonic distortion.

Other specifications

CD player section

System	Compact disc digital audio system
Signal-to-noise ratio	93 dB
Frequency response	10 - 20,000 Hz
Wow and flutter	Below measurable limit
Laser Diode Properties	
Material	GaAlAs
Wavelength	780 nm
Emission Duration	Continuous
Laser output power	Less than 44.6 μ W*

* This output is the value measured at a distance of 200 mm from the objective lens surface on the Optical Pick-up Block.

Tuner section

FM

Tuning range	87.5 - 107.9 MHz
Antenna terminal	External antenna connector
Intermediate frequency	10.7 MHz
Usable sensitivity	8 dBf
Selectivity	75 dB at 400 kHz
Signal-to-noise ratio	62 dB (stereo), 65 dB (mono)
Harmonic distortion at 1 kHz	0.9 % (stereo), 0.5 % (mono)
Separation	35 dB at 1 kHz
Frequency response	30 - 15,000 Hz
Capture ratio	2 dB

AM

Tuning range	530 - 1,710 kHz
Antenna terminal	External antenna connector
Intermediate frequency	10.71 MHz/450 kHz
Sensitivity	30 μ V

Power amplifier section

Outputs	Speaker outputs (sure seal connectors)
Speaker impedance	4 - 8 ohms
Maximum power output	40 W \times 4 (at 4 ohms)

General

Outputs	Line outputs (2) Power antenna relay control lead Power amplifier control lead
Tone controls	Bass \pm 10 dB at 100 Hz Treble \pm 10 dB at 10 kHz
Power requirements	12 V DC car battery (negative ground)
Dimensions	Approx. 188 \times 58 \times 177 mm (7 $\frac{1}{2}$ \times 2 $\frac{3}{8}$ \times 7 in.) (w/h/d)
Mounting dimensions	Approx. 178 \times 50 \times 154 mm (7 $\frac{1}{8}$ \times 2 \times 6 $\frac{1}{8}$ in.) (w/h/d)
Mass	Approx. 1.5 kg (3 lb. 4.9 oz.)
Supplied accessories	Rotary remote (1) Parts for installation and connections (1 set) Front panel case (1)
Optional accessories	Wireless remote RM-X41 BUS cable (supplied with an RCA pin cord) RC-61 (1 m), RC-62 (2 m) RCA pin cord RC-63 (1 m), RC-64 (2 m), RC-65 (5 m) Cleaning cloth XP-CD1 Compact disc single adapter CSA-8
Optional equipment	CD changer CDX-705 (10 discs), CDX-T65 (6 discs), CDX-T62 (6 discs), MD changer MDX-60, MDX-61 Source selector XA-C30

Design and specifications are subject to change without notice.

Troubleshooting guide

The following checklist will help you remedy the problems you may encounter with your unit. Before going through the checklist below, check the connection and operating procedures.

General

Problem	Cause/Solution
No sound.	<ul style="list-style-type: none">• Cancel the MUTE function.• Set the fader control to the center position for two-speaker systems.• Rotate the dial in a clockwise direction to adjust the volume.
The contents of the memory have been erased.	<ul style="list-style-type: none">• The power cord or battery has been disconnected.• The reset button has been pressed. → Store again into the memory.
Indications do not appear in the display.	Remove the front panel and clean the connectors. See “Cleaning the connectors” (page 21) for details.

CD/MD playback

Problem	Cause/Solution
A disc cannot be loaded.	<ul style="list-style-type: none">• Another CD is already loaded.• The CD is forcibly inserted upside down or in the wrong way (MD).
Playback does not begin.	Defective MD or dusty CD.
A disc is automatically ejected.	The ambient temperature exceeds 50 °C (122 °F).
The operation buttons do not function.	Press the reset button.
The sound skips due to vibration.	<ul style="list-style-type: none">• The unit is installed at an angle of more than 20°.• The unit is not installed in a sturdy part of the car.

Radio reception

Problem	Cause/Solution
Preset tuning is not possible.	<ul style="list-style-type: none">• Memorize the correct frequency.• The broadcast signal is too weak.
Automatic tuning is not possible.	The broadcast signal is too weak. → Use manual tuning.
The “ST” indication flashes.	<ul style="list-style-type: none">• Tune in the frequency accurately.• The broadcast signal is too weak. → Set to the MONO mode (page 10).

Error displays (when an optional CD/MD changer is connected)

The following indications will flash for about five seconds, and an alarm sound will be heard.

Display	Cause	Solution
NO Mag	The disc magazine is not inserted in the CD/MD changer.	Insert the disc magazine in the CD/MD changer.
NO Disc	No disc is inserted in the CD/MD changer.	Insert discs in the CD/MD changer.
NG Discs	A CD/MD cannot play because of some problem.	Insert another CD/MD.
Error *1	A CD is dirty or inserted upside down.*2	Clean or insert the CD correctly.
	An MD does not play because of some problem.*2	Insert another MD.
Blank *1	No tracks have been recorded on an MD.*2	Play an MD with tracks recorded on it.
PushReset	The CD/MD changer cannot be operated because of some problem.	Press the reset button of the unit.
Not Ready	The lid of the MD changer is open or MDs are not inserted properly.	Close the lid or insert the MDs properly.
HighTemp	The ambient temperature is more than 50 °C (122 °F).	Wait until the temperature goes down below 50 °C (122 °F).

*1 When an error occurs during playback of an MD or CD, the disc number of the MD or CD does not appear in the display.

*2 The disc number of the disc causing the error appears in the display.

If the above-mentioned solutions do not help improve the situation, consult your nearest Sony dealer.

Index

A

- Automatic Music Sensor (AMS) 6, 14
- Automatic tuning 9
- Auto Scroll 14

B

- Balance 13
- Bass 13
- Bank Play 19
- Beep tone 13
- Best Tuning Memory (BTM) 9

C

- Caution alarm 4
- CD playback 5, 14
- Clock 5

D, E

- Dimmer 13
- Direct disc selection 15
- Disc Memo 18
- Display 5, 10, 14, 19
- Dual information 13

F, G, H

- Fader 13
- Front panel 4
- Fuse 21

I, J, K

- Illumination color 13
- Intro Scan 6, 15

L

- List-up 11, 18
- Local seek 10
- Locating
 - a disc 15, 18
 - a specific point 6, 14
 - a specific track 6, 14
- Loudness 13

M, N, O

- Manual search 6, 14
- Manual tuning 10
- MD playback 14
- Memorizing a station 10
- Monaural mode 10
- Mute 13

P, Q

- PLAY MODE
 - Bank 19
 - Intro 6, 15
 - Local 10
 - Mono 10
 - PGM 7, 16
- Program memory 7, 16

R

- Radio 9
- Repeat Play 6, 15
- Reset 4
- Rotary remote 4, 11, 13

S

- SET UP
 - Amber 13
 - A.Scr1 13
 - Beep 13
 - Clock 5
 - Dimmer 13
 - D.Info 13
 - Green 13
 - Loud 13
 - RM 13
- Shuffle Play 6, 15
- Station Memo 10

T, U

- Treble 13

V

- Volume 13

W, X, Y, Z

- Wireless remote 23

