

Trinitron Color TV

Operating Instructions _____ **GB**

- Before operating the unit, please read this manual thoroughly and retain it for future reference.

使用說明書 _____ **CT**

- 使用本電視機之前請先詳細閱讀此手冊，並妥善保存以備日後用作參考。

使用说明书 _____ **CS**

- 使用本电视机之前请详细阅读此手册，并妥善保存以备日后用作参考。

FD Trinitron
WEGA



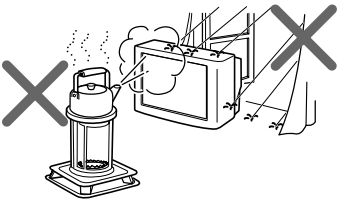
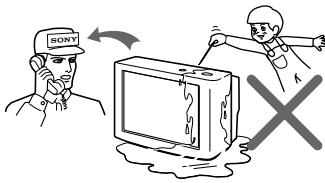
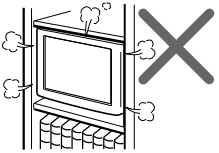
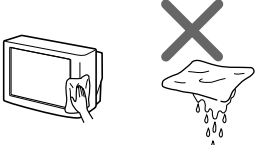
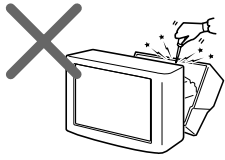
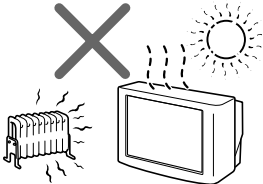
KV-DR34


KV-DR29

M97
M93


WARNING

- Dangerously high voltages are present inside the TV.
- TV operating voltage: 220 – 240 V AC.
- Do not plug in the power cord until you have completed making all other connections; otherwise a minimum leakage current might flow through the antenna and other terminals to ground.
- To avoid battery leakage and damage to the remote, remove the batteries from the remote if you are not going to use it for several days. If any liquid leaks from the batteries and touches your skin, immediately wash it away with water.

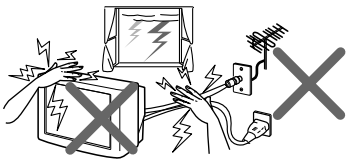
| | |
|--|---|
|  <p>For your own safety, do not touch any part of the TV, the power cord and the antenna cable during lightning storms.</p> |  <p>For children's safety, do not leave children alone with the TV. Do not allow children to climb onto it.</p> |
|  <p>To prevent fire or shock hazard, do not expose the TV to rain or moisture.</p> |  <p>Do not operate the TV if any liquid or solid object falls into it. Have it checked immediately by qualified personnel only.</p> |
|  <p>Do not block the ventilation openings of the TV. Do not install the TV in a confined space, such as a bookcase or built-in cabinet.</p> |  <p>Clean the TV with a dry and soft cloth. Do not use benzine, thinner, or any other chemicals to clean the TV. Do not attach anything (e.g., adhesive tape, cellophane tape, glue) on the painted cabinet of the TV. Do not scratch the picture tube.</p> |
|  <p>Do not open the cabinet and the rear cover of the TV as high voltages and other hazards are present inside the TV. Refer servicing and disposal of the TV to qualified personnel.</p> |  <p>Your TV is recommended for home use only. Do not use the TV in any vehicle or where it may be subject to excessive dust, heat, moisture or vibrations.</p> |

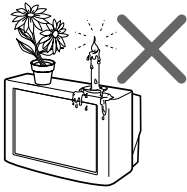

Do not place any objects on the TV.

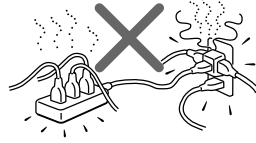

Do not plug in too many appliances to the same power socket. Do not damage the power cord.

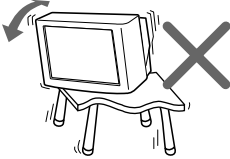


Install the TV on a stable TV stand and floor which can support the TV set weight. Ensure that the TV stand surface is flat and its area is larger than the bottom area of the TV.



Pull the power cord out by the plug. Do not pull the power cord itself. Even if your TV is turned off, it is still connected to the AC power source (mains) as long as the power cord is plugged in. Unplug the TV before moving it or if you are not going to use it for several days.

■ Securing the TV

 
To prevent the TV from falling, use the supplied screws, clamps and band to secure the TV.




screws



 clamps




band

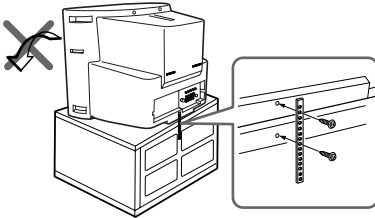


Screw the band to the TV stand and to the provided hole at the rear of your TV.

or

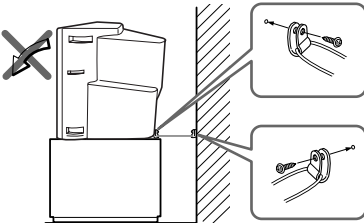

- (1) Put a cord or chain through the clamps.
- (2) Screw one clamp to a wall or pillar and the other clamp to the provided hole at the rear of your TV.

or

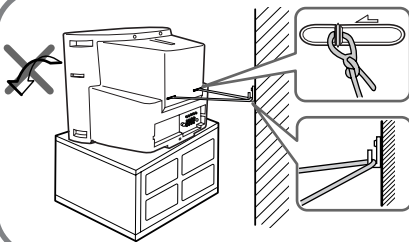

- (1) Attach each end of a cord or chain to the provided holders at the rear of your TV.
- (2) Securely fix the attached cord or chain to a wall or pillar using an attachment which can support the TV set weight.

Note

- Use only the supplied screws. Use of other screws may damage the TV.

Table of Contents

Installation

| | |
|---|---|
| Getting Started | 6 |
| Setting up your TV ("INITIAL SETUP") | 7 |

Overview of Controls

| | |
|--------------------------------|---|
| TV front and rear panels | 8 |
| Remote control | 9 |

Advanced Operations

| | |
|--|----|
| Selecting the picture and sound modes | 11 |
| Viewing higher quality pictures with DRC-MF | 12 |
| Viewing the picture in wide mode .. | 12 |
| Watching Picture-in-Picture (PIP) (KV-DR34M97 only) | 13 |
| Selecting a TV program using PIP (KV-DR34M97 only) | 14 |
| Listening with surround sound | 14 |
| Setting the timers | 15 |
| Enjoying stereo or bilingual programs | 16 |

Menu Adjustment


| | |
|--|----|
| Introducing the menu system | 17 |
| Changing the "PICTURE" setting ... | 20 |
| Changing the "SOUND" setting | 22 |
| Changing the Picture-in-Picture ("PIP") setting (KV-DR34M97 only) ... | 24 |
| Changing the "SETUP" setting | 25 |
| Changing the Channel Preset ("CH PRESET") setting | 27 |

Additional Information

| | |
|------------------------------------|------------|
| Connecting optional components ... | 30 |
| Troubleshooting | 32 |
| Specifications | Back cover |

GB

■ Getting Started

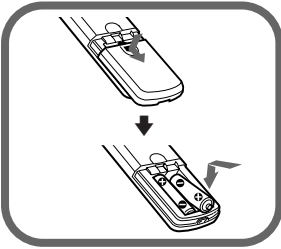


Step 1

Insert the batteries (supplied) into the remote.

Note

- Do not use old or different types of batteries together.

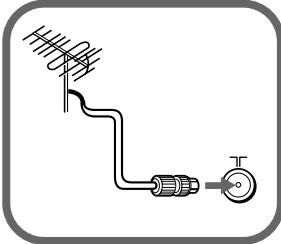


Step 2

Connect the antenna cable (not supplied) to Υ (antenna input) at the rear of the TV.

Tip

- You can also connect your TV to other optional components (see page 30).

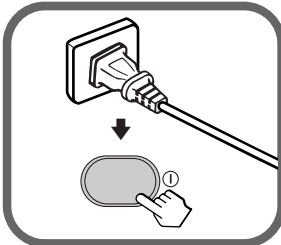

Step 3

Plug in the power cord, then press ⏻ on the TV to turn it on.




Step 4

Set up the TV by following the instructions of the "INITIAL SETUP" menu (see page 7).


■ Setting up your TV (“INITIAL SETUP”)

When you turn on your TV for the first time, the “INITIAL SETUP” menu will appear. This menu allows you to change the menu language, adjust the picture position and preset the TV channels automatically.

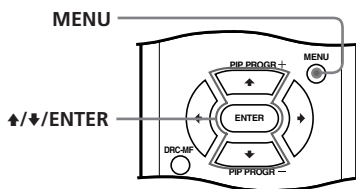


- 1 Press **▲** or **▼** to select the desired menu language (e.g., “ENGLISH”), then press ENTER.


The selected menu language appears.

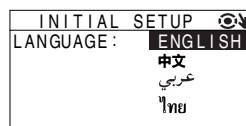

- 2 If the “PIC ROTATION” bar is slanted, press **▲** or **▼** to adjust it, then press ENTER.

If no adjustment is necessary, then press ENTER.

The  or  icon on the screen flashes while adjusting.


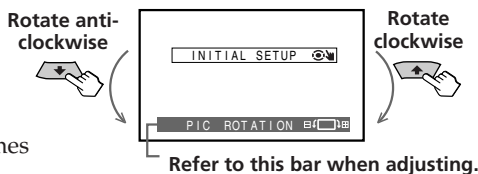



Refer to this bar when adjusting.

- 3 Press **▲** or **▼** to select “YES”, then press ENTER to preset the channels automatically (see page 27).


The screen will indicate automatic presetting is in progress.

To skip automatic channel presetting, select “NO”, then press ENTER.

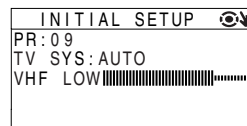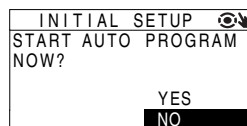

- 4 Press **▲** or **▼** to select “NO”, then press ENTER. The “INITIAL SETUP” menu will not appear again the next time you turn on the TV by pressing .


To allow this menu to appear again, select “YES”, then press ENTER.

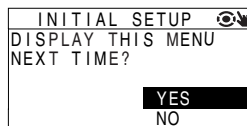

Tips


- You can immediately go to the end of the “INITIAL SETUP” menu by pressing MENU.
- You can also set up your TV using the menu system (see page 17).

TV front and rear panels

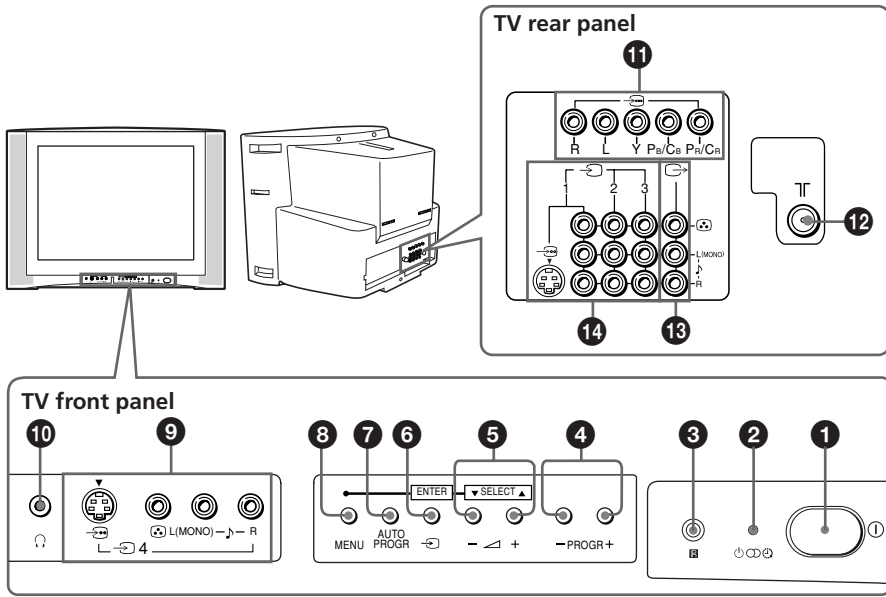

| Button/Terminal | Function | Page |
|-----------------|---------------------------------|------|
| ① ① | Turn off or turn on the TV. | – |
| ② ⏻ | Standby indicator. | – |
| ② ⌚ | Wake Up indicator. | 15 |
| ② 🎧 | Stereo/bilingual indicator. | 16 |
| ③ 📡 | Remote control sensor. | – |
| ④ PROGR +/- | Select program number. | – |
| ⑤ 🔊 +/- | Adjust volume. | – |
| ⑥ 📺 | Select TV or video input. | – |
| ⑦ AUTO PROGR | Preset channels automatically. | – |
| Menu operations | | |
| ⑤ SELECT ▼/▲ | Select and adjust items | 19 |
| ⑥ ENTER | Confirm selected items | 19 |
| ⑧ MENU | Display or cancel the menu | 19 |
| ⑨ 📺4 | Video input terminal 4. | 30 |
| ⑩ 🎧 | Headphone jack. | – |
| ⑪ 📺... | Component video input terminal. | 31 |
| ⑫ 📡 | Antenna input terminal. | 30 |
| ⑬ 📺 | Monitor output terminal. | 30 |
| ⑭ 📺1, 📺2, 📺3 | Video input terminal 1, 2, 3. | 30 |


Remote control

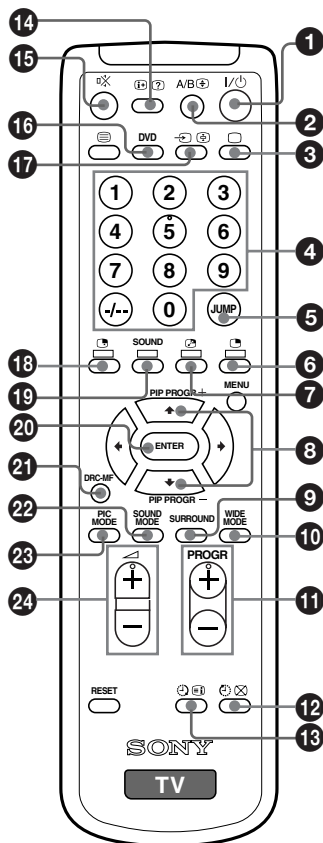

| Button | Function | Page |
|--|--|-------|
| 1 I/⏻ | Turn off temporarily or turn on the TV. | - |
| 3 TV | Display the TV input. | - |
| 4 0 - 9, -/-- | Input numbers. | - |
| 5 JUMP | Jump to previous program number. | - |
| 9 SURROUND | Select surround mode. | 14 |
| 10 WIDE MODE | Select wide-mode (16:9). | 12 |
| 11 PROGR +/- | Select program number. | - |
| 14 i+ | Display on-screen information. | - |
| 15 ⊗ | Mute the sound. | - |
| 16 DVD | Select component video input. | 31 |
| 17 TV/V | Select TV or video input. | 30 |
| 21 DRC-MF | Select DRC-MF mode. | 12 |
| 22 SOUND MODE | Select sound mode. | 11 |
| 23 PIC MODE | Select picture mode. | 11 |
| 24 ▲ +/- | Adjust volume. | - |
| Timer operations | | |
| 12 ⌚ | Set TV to turn off automatically. | 15 |
| 13 ⌚ | Set TV to turn on automatically. | 15 |
| PIP operations (yellow label) (KV-DR34M97 only) | | |
| 6 | Display a sub screen. | 13 |
| 7 | Swap main and sub screens. | 13 |
| 8 PIP PROGR +/- | Display and change programs in the sub screen. | 13,14 |
| 18 | Select a video input in the sub screen. | 13 |
| 19 SOUND | Swap sound between main and sub screen. | 13 |
| 20 ENTER | Change sub screen to main screen. | 14 |
| Stereo/bilingual operations | | |
| 2 A/B | Select stereo/bilingual mode. | 16 |

continue


continued

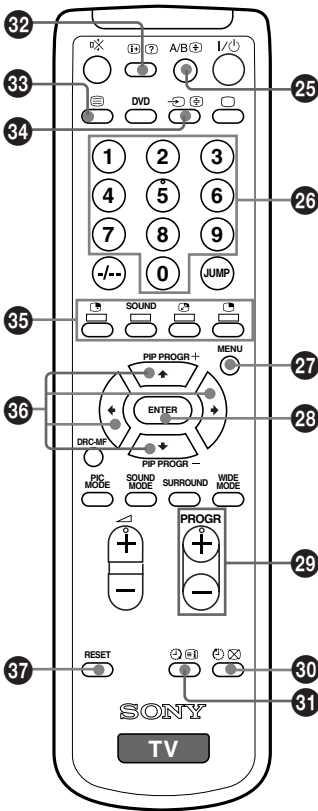

| Button | Function | Page |
|--|-----------------------------|------|
| Menu operations | | |
| 27 MENU | Display or cancel the menu. | 19 |
| 28 ENTER | Confirm selected items. | 19 |
| 36 ↑, ↓, ←, → | Select and adjust items. | 19 |
| Teletext operations (green label) | | |
| 25 ⇄ | Not function for your TV. | - |
| 26 0 - 9 | | |
| 29 PROGR +/- | | |
| 30 ⊗ | | |
| 31 ≡ | | |
| 32 ? | | |
| 33 ≡ | | |
| 34 ⇄ | | |
| 35 ■ (red, green, yellow, blue) | | |
| 37 RESET | | |

Selecting the picture and sound modes

You can select picture and sound modes and adjust the setting to your preference in the "PERSONAL" option.

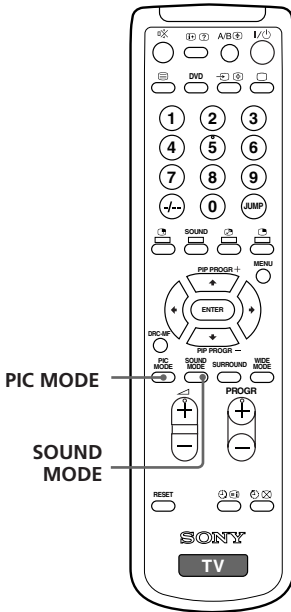





Selecting the picture mode

Press PIC MODE to select the desired picture mode.

| Select | To |
|------------|---|
| "DYNAMIC" | view high contrast pictures. |
| "STANDARD" | view normal pictures. |
| "HI-FINE" | view higher density pictures with mild contrast. |
| "PERSONAL" | receive the last adjusted picture setting from the "ADJUST" option in the "PICTURE" menu (see page 21). |


Selecting the sound mode

Press SOUND MODE to select the desired sound mode.

| Select | To |
|---|---|
| "  DYNAMIC" | listen to dynamic and clear sound that emphasizes both the low and high tones. |
| "  DRAMA" | listen to sound that emphasizes voice and high tones. |
| "  SOFT" | listen to soft sound. |
| "  PERSONAL" | receive the last adjusted sound setting from the "ADJUST" option in the "SOUND" menu (see page 23). |

■ Viewing higher quality pictures with DRC-MF

The Digital Reality Creation-Multi Function (DRC-MF) feature allows you to enjoy higher quality pictures on your TV. You can use the DRC-MF button to select "DRC1250" or "DRC PROGRESSIVE".

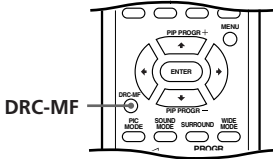

| Select | To |
|-------------------|--|
| "DRC1250" | view super real (higher density) pictures. |
| "DRC PROGRESSIVE" | reduce jitter of any small areas or scanning lines (e.g., letters or the edge of objects) on the screen. |


Note

- The DRC-MF mode is not selectable when the "GAME MODE" or Picture-in-Picture ("PIP") mode is turned on.

The DRC-MF logo () and "DRC-MF" are trademarks of Sony Corporation.

■ Viewing the picture in wide mode


When receiving a wide-mode (16:9) signal, the picture will appear "squeezed" (compressed) on your screen. Use the WIDE MODE button to view the picture with the optimal effect.

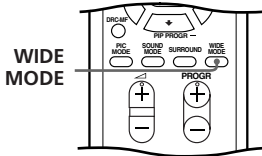





| Select | To |
|--------|---------------------------------------|
| "ON" | view the picture in wide-mode (16:9). |
| "OFF" | cancel wide-mode (16:9). |

■ Watching Picture-in-Picture (PIP)

► KV-DR34M97 only

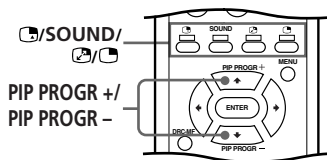
With the PIP feature, you can display two different TV programs or video input at the same time by using the  button.



| To | Press |
|--|--|
| Display a sub screen |  To cancel the sub screen, press the button again. |
| Change a program number in the sub screen | PIP PROGR + or PIP PROGR -. |
| Select a video input in the sub screen |  . |
| Swap pictures between the main and sub screens |  . |
| Swap sound between the main and sub screens | SOUND. |

A “♪” symbol will appear next to the program number or video input display to indicate which screen you are hearing.


Notes

- The DRC-MF mode is not selectable when PIP is turned on.
- The picture and sound from the  (monitor output) terminals will always be from the main screen, even when you select the sub screen sound by pressing SOUND (see page 30).



■ Selecting a TV program using PIP

▶ KV-DR34M97 only

You can select your desired TV program directly from the PIP sub screen by using PIP PROGR +/- buttons.

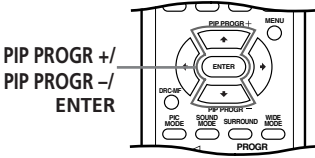


- 1** Press PIP PROGR +/- until the desired program appears in the sub screen.
- 2** Press ENTER to change the sub screen program to the main screen.

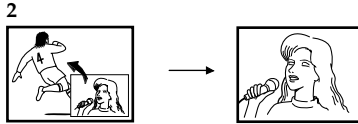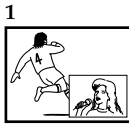

■ Listening with surround sound

You can use the SURROUND button to listen to the sound effects of a concert hall or movie theater.

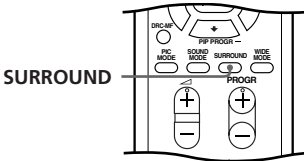


| Select | To |
|---------------|--|
| "TruSurround" | listen to the surround sound that spreads out to the rear of a room. |
| "SIMULATED" | listen to monaural sound with a stereo-like effect. |
| "OFF" | cancel surround sound. |

The surround of your TV is categorized as TruSurround.

TruSurround™ is a trademark of SRS Labs, Inc. SRS and the SRS symbol are registered trademarks of SRS Labs, Inc. in the United States and selected foreign countries. SRS and TruSurround are incorporated under license from SRS Labs, Inc. and are protected under United States Patent Nos. 4,748,669 and 4,841,572 with numerous additional issued and pending foreign patents.


Setting the timers

You can set your TV to turn on and off automatically by using the WAKE UP and SLEEP timers respectively.

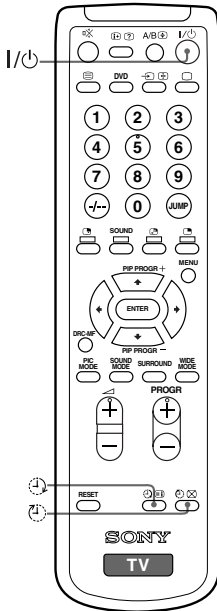

Setting the Wake Up timer

- 1 Press until the desired period of time appears on the screen.

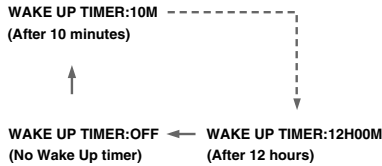


The Wake Up timer starts immediately after you have set it.

- 2 Select the program number or video input you want to wake up to.
- 3 Press or set the Sleep timer if you want the TV to turn off automatically.

The indicator on the TV lights up orange when the TV goes into standby mode.

Setting the Sleep timer

Press until the desired period of time appears on the screen.

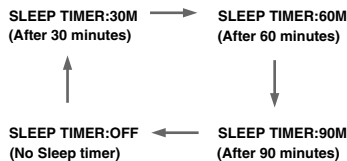


The Sleep timer starts immediately after you have set it.

Notes

- You can also cancel the Wake Up and Sleep timers by pressing on the TV to turn off the TV.
- If no buttons are pressed for more than two hours after the TV is turned on using the Wake Up timer, the TV automatically goes into standby mode.

Enjoying stereo or bilingual programs

You can enjoy stereo sound or bilingual programs of NICAM and A2 stereo systems by using the A/B button.

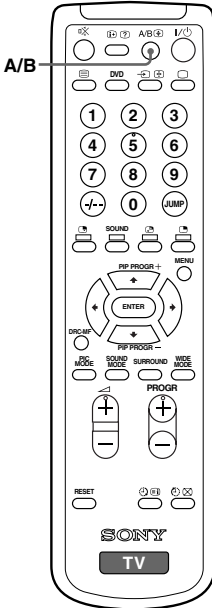

When receiving a NICAM program

| Broadcasting | On-screen display (Selected sound) |
|-----------------|--|
| NICAM stereo | NICAM (Stereo sound) → MONO (Regular sound) |
| NICAM bilingual | NICAM MAIN (Main sound) → NICAM SUB (Sub sound) → MONO (Regular sound) |
| NICAM monaural | NICAM MAIN (Main sound) → MONO (Regular sound) |

When receiving an A2 program


| Broadcasting | On-screen display (Selected sound) |
|--------------|--|
| A2 stereo | STEREO (Stereo sound) → MONO (Regular sound) |
| A2 bilingual | MAIN (Main sound) → SUB (Sub sound) |




Notes

- If the stereo sound is noisy when receiving a stereo program, select “MONO”. The sound becomes monaural, but the noise is reduced.
- Before receiving a NICAM stereo program in China, please check the NICAM broadcast condition in your area. When receiving a NICAM stereo program, the receiving conditions might vary depending on area. In addition, different strength of the NICAM broadcast signal might affect the receiving quality.
- If the sound is distorted when receiving a monaural program through ㊦ (antenna input), press A/B repeatedly until “MONO” appears on the screen. To cancel the monaural sound setting, press A/B again until “AUTO” appears on the screen.
- Your TV can only receive monaural sound when you select the PIP sub screen sound by pressing SOUND (see page 13).

Introducing the menu system

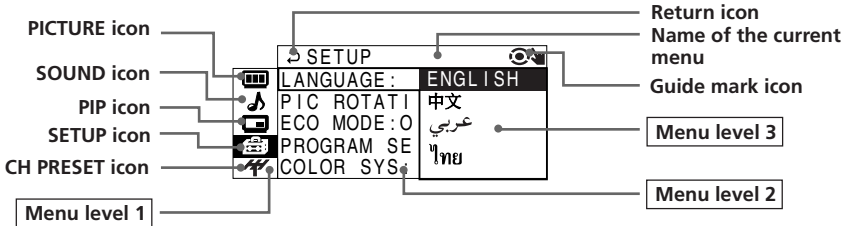

The MENU button lets you open a menu and change the settings of your TV. The following is an overview of the menu system.



| Level 1 | Level 2 | Level 3/Function | Page |
|---|-------------------|--|------|
| "PICTURE"  | "DRC-MF" | Select the "DRC-MF" mode: "DRC1250" → "PROGRESSIVE" | 20 |
| | "PICTURE MODE" | Select the picture mode: "DYNAMIC" → "STANDARD" → "HI-FINE" → "PERSONAL" → "ADJUST" | |
| | "ADJUST" | Adjust the "PERSONAL" option: "PICTURE" → "COLOR" → "BRIGHT" → "HUE" → "SHARP" | |
| | "3D-NR" | Reduce picture noise: "ON" → "OFF" | |
| | "WIDE MODE" | Change the picture size. | |
| | "GAME MODE" | Adjust the picture settings for video games. | |
| "SOUND"  | "SOUND MODE" | Select the sound mode: "DYNAMIC" → "DRAMA" → "SOFT" → "PERSONAL" → "ADJUST" | 22 |
| | "ADJUST" | Adjust the "PERSONAL" option: "BASS" → "TREBLE" → "BALANCE" → "BBE"* | |
| | "SURROUND" | Select the "SURROUND" mode: "TruSurround" → "SIMULATED" → "OFF" | |
| | "INTELLIGENT VOL" | Adjust volume automatically. | |
| "PIP" (KV-DR34M97 only)  | "POSITION" | Change the position of the sub screen. | 24 |
| | "PIP" | Display a sub screen within the main picture. | |
| | "SWAP" | Exchange pictures between main screen and sub screen. | |


continue

continued

| Level 1 | Level 2 | Level 3/Function | Page |
|--|------------------|--|------|
| "SETUP"  | "LANGUAGE" | Change the menu language: "ENGLISH" → "中文"(Chinese) → "عربي"(Arabic) → "ไทย"(Thai) | 25 |
| | "PIC ROTATION" | Adjust the picture position. | |
| | "ECO MODE" | Reduce power consumption of your TV. | |
| | "PROGRAM SETUP" | Adjust each program number settings. | |
| | "COLOR SYS" | Select the color system: "AUTO" → "PAL" → "SECAM" → "NTSC3.58" → "NTSC4.43" | |
| "CH PRESET"  | "AUTO PROGRAM" | Preset channels automatically. | 27 |
| | "MANUAL PROGRAM" | Preset channels manually. | |
| | "TV SYS" | Select the TV system: "B/G" → "I" → "D/K" → "M" | |

* The BBE is manufactured by Sony Corporation under license from BBE Sound, Inc. It is covered by U.S. Patent No. 4,638,258 and No. 4,482,866. The word "BBE" and the BBE symbol are the trademarks of BBE Sound, Inc.

How to use the menu

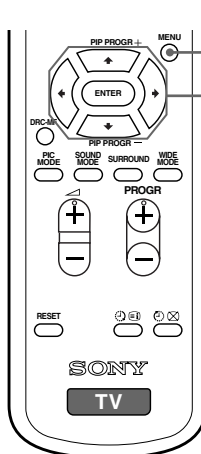

Press MENU to display the menu.

Press \uparrow or \downarrow (or \leftarrow/\rightarrow) to select the desired item.

Press ENTER to confirm your selection and go to the next level.

The diagram shows a Sony TV control panel with buttons for PIP PROG, MENU, DRC, PIP MODE, SOUND MODE, SURROUND, WIDE MODE, PROGR, RESET, and TV. Three callout boxes illustrate the menu navigation process: 1. Pressing the MENU button leads to the 'PICTURE' menu. 2. Pressing the up/down arrow buttons leads to the 'PIP' menu. 3. Pressing the ENTER button leads to the 'POSITION' menu.


Other menu operations

| To | Press |
|--------------------------------------|---|
| Adjust the setting value | \uparrow , \downarrow , \leftarrow or \rightarrow . |
| Move to the next/previous menu level | \leftarrow or \rightarrow . |
| Cancel the menu | MENU. |

Tips

- If you want to exit from Menu level 2 to Menu level 1, press \uparrow or \downarrow until the return icon (\curvearrowright) is highlighted, then press ENTER.
- Some of the menu items can be operated directly using the remote buttons.
- The MENU, ENTER, and SELECT ∇/\blacktriangle buttons on the TV can also be used for the operations above.


Front of TV

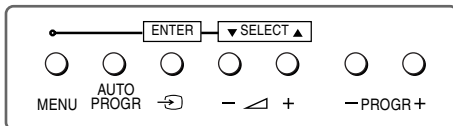


■ Changing the “PICTURE” setting


The “PICTURE” menu allows you to adjust the picture settings.

1 Press MENU.

2 Make sure the “PICTURE” icon () is selected, then press ENTER.

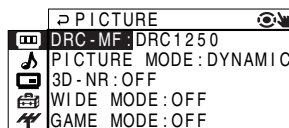

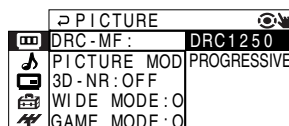


3 Press \uparrow or \downarrow to select the desired item (e.g., “DRC-MF”), then press ENTER.



| Select | To |
|----------------|--|
| “DRC-MF” | choose either “DRC1250” or “PROGRESSIVE” (see page 12). |
| “PICTURE MODE” | choose either “DYNAMIC”, “STANDARD”, “HI-FINE”, “PERSONAL”*, or “ADJUST” (see page 11). |
| “3D-NR” | adjust picture signal automatically to reduce noise. Press \uparrow or \downarrow to select “ON”, then press ENTER. To cancel, select “OFF”, then press ENTER. |
| “WIDE MODE” | choose either “ON” or “OFF” (see page 12). |
| “GAME MODE” | adjust the picture setting that is suitable to view video games. Press \uparrow or \downarrow to select “ON”, then press ENTER. To cancel, select “OFF”, then press ENTER. |

* When the “PERSONAL” mode is selected, you can receive the last adjusted picture settings from the “ADJUST” option (see page 21).

Notes


- “GAME MODE” is available only when receiving signals through  (video input),  (S video input), or  (component video input).
- The DRC-MF mode is not selectable when GAME MODE is on.

■ Changing the “SOUND” setting


The “SOUND” menu allows you to adjust the sound settings.

1 Press MENU.

2 Press **↑** or **↓** to select the “SOUND” icon (🔊), then press ENTER.

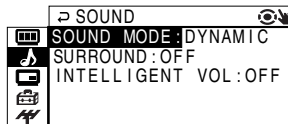

3 Press **↑** or **↓** to select the desired item (e.g., “SOUND MODE”), then press ENTER.

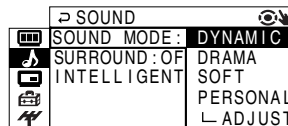

| Select | To |
|-------------------|--|
| “SOUND MODE” | choose either “DYNAMIC”, “DRAMA”, “SOFT”, “PERSONAL”*, or “ADJUST” (see page 11). |
| “SURROUND” | choose either “TruSurround”, “SIMULATED” or “OFF” (see page 14). |
| “INTELLIGENT VOL” | adjust the volume of all program numbers and video inputs automatically. Press ↑ or ↓ to select “ON”, then press ENTER. To cancel, select “OFF”, then press ENTER. |

* When the “PERSONAL” mode is selected, you can receive the last adjusted sound settings from the “ADJUST” option (see page 23).

Adjusting the "ADJUST" items under "SOUND MODE"

- 1** Press **↑** or **↓** to select the desired item (e.g., "BALANCE"), then press ENTER.



BALANCE  00

- 2** Adjust the value according to the following table, then press ENTER .

| For | Press ↓ or ← to | Press ↑ or → to |
|-----------|---|--------------------------------------|
| "BASS" | decrease the bass. | increase the bass. |
| "TREBLE" | decrease the treble. | increase the treble. |
| "BALANCE" | increase the left speaker's volume. | increase the right speaker's volume. |
| "BBE" | select "HIGH" for higher enhancement of sound clarity; select "LOW" for lower enhancement of sound clarity; select "OFF" to cancel BBE sound. | |


- 3** Repeat the above steps to adjust other items.
The adjusted settings will be received when you select "PERSONAL".
-


■ Changing the Picture-in-Picture (“PIP”) setting

▶ KV-DR34M97 only


The “PIP” menu allows you to display a sub screen, change the sub screen position and exchange pictures between the main and sub screens.



1 Press MENU.

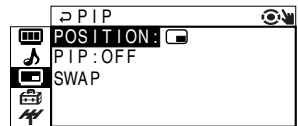2 Press \uparrow or \downarrow to select the “PIP” icon (), then press ENTER.

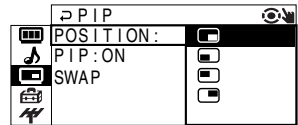

3 Press \uparrow or \downarrow to select the desired item (e.g., “POSITION”), then press ENTER.




| Select | To |
|------------|---|
| “POSITION” | <p>change the position of the sub screen.</p> <p>Press \uparrow or \downarrow to select the desired position, then press ENTER .</p>  |
| “PIP” | <p>display a sub screen.</p> <p>Press \uparrow or \downarrow to select “ON”, then press ENTER .</p> <p>To cancel, press  or select “OFF”, then press ENTER .</p> |
| “SWAP” | exchange pictures between the main screen and sub screen. |

■ Changing the “SETUP” setting


The “SETUP” menu allows you to change the menu language, adjust the picture position, reduce your TV power consumption, set up your program numbers and select the color system.


1 Press MENU.

2 Press \uparrow or \downarrow to select the “SETUP” icon (⊞), then press ENTER.

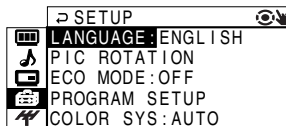

3 Press \uparrow or \downarrow to select the desired item (e.g., “COLOR SYS”), then press ENTER.

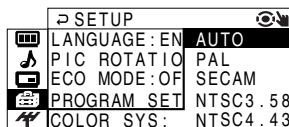

| Select | To |
|-----------------|---|
| “LANGUAGE” | change the menu language. Press \uparrow or \downarrow to select either “ENGLISH”, “中文” (Chinese), “عربي” (Arabic), or “ไทย” (Thai) then press ENTER. The selected menu language appears. |
| “PIC ROTATION” | adjust the picture position when it is not aligned with the TV screen. Press \uparrow , \rightarrow , \downarrow or \leftarrow to adjust the picture position, then press ENTER.  |
| “ECO MODE” | reduce power consumption of your TV to save energy. Press \uparrow or \downarrow to select “ON”, then press ENTER. To cancel, select “OFF”, then press ENTER. When you press Ⓢ or turn on the TV, ECO MODE (ECO) symbol will appear on the screen for awhile. |
| “PROGRAM SETUP” | adjust each program number settings (see Adjusting each program number settings (“PROGRAM SETUP”) on page 26). |
| “COLOR SYS” | Select the color system. Normally, set this to “AUTO”. |


continue

continued


Adjusting each program number settings (“PROGRAM SETUP”)


1 Select “PROGRAM SETUP” from the “SETUP” menu.

2 Select “PR” and press ENTER. Press \uparrow or \downarrow to select the desired program number you want to adjust, then press ENTER.

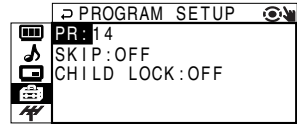

3 Press \uparrow or \downarrow to select the desired item (e.g., “SKIP”), then press ENTER.

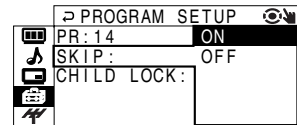


| Select | To |
|--------------|--|
| “PR” | select the desired program number. |
| “SKIP” | skip unwanted or unused program number. Press \uparrow or \downarrow to select “ON”, then press ENTER. To cancel, select “OFF”, then press ENTER. |
| “CHILD LOCK” | prevent children from watching this selected program number. Press \uparrow or \downarrow to select “ON”, then press ENTER. The lock symbol () appears on the screen. To cancel, select “OFF”, then press ENTER If you preset a locked program number, that program number will be unlocked automatically. |


4 To continue adjusting other program numbers, press \uparrow or \downarrow to select “PR”, then repeat step 2 and 3.

■ Changing the Channel Preset (“CH PRESET”) setting


The “CH PRESET” menu allows you to preset channels automatically, manually preset channels and select the TV system.

1 Press MENU.

2 Press \uparrow or \downarrow to select the “CH PRESET” icon () , then press ENTER.

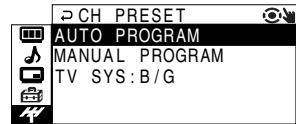

3 Press \uparrow or \downarrow to select the desired item (e.g., “AUTO PROGRAM”), then press ENTER.

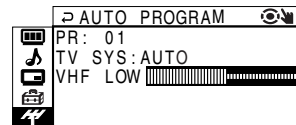

| Select | To |
|------------------|---|
| “AUTO PROGRAM” | preset channels automatically. |
| “MANUAL PROGRAM” | manually preset desired channels and channels that cannot be preset automatically (see Presetting channels manually on page 28). |
| “TV SYS” | select the TV system. Press \uparrow or \downarrow to select either “B/G”, “I”, “D/K” or “M”, then press ENTER. |



continue

continued

Presetting channels manually

1 After selecting “MANUAL PROGRAM”, select the program number to which you want to preset a channel.

- (1) Make sure “PR” is selected, then press ENTER.
- (2) Press \uparrow or \downarrow until the program number you want to preset (e.g., program number “10”) appears on the menu, then press ENTER.

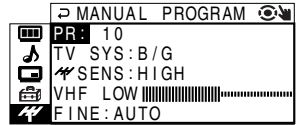
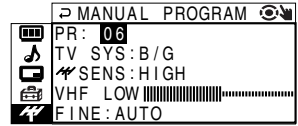


Tip

- You can also select the program number with the PROGR +/- or number buttons.



2 Select the desired channel.

- (1) Press \uparrow or \downarrow to select either “VHF LOW”, “VHF HIGH”, or “UHF”, then press ENTER.
- (2) Press \uparrow or \downarrow until the desired channel’s broadcast appears on the TV screen, then press ENTER.

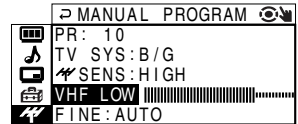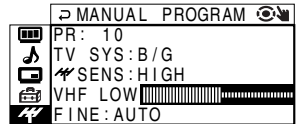


3 If the sound of the desired channel is abnormal, select the appropriate TV system.

- (1) Press \uparrow or \downarrow to select “TV SYS”, then press ENTER.
- (2) Press \uparrow or \downarrow until the sound becomes normal, then press ENTER.

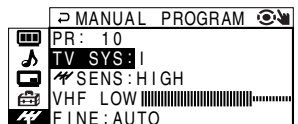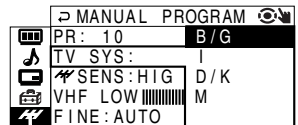


4 If you are not satisfied with the picture and sound quality, you may be able to improve them by using the “FINE” tuning feature.

(1) Press **▲** or **▼** to select “FINE”, then press ENTER.

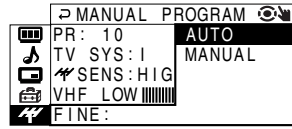


(2) Press **▲** or **▼** to select “MANUAL”, then press ENTER.

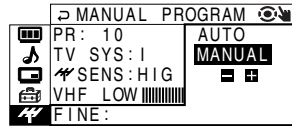


(3) Press **▲**, **▼**, **◀** or **▶** until the picture and sound quality are optimal, then press ENTER.

The + or – icon on the menu flashes while tuning.

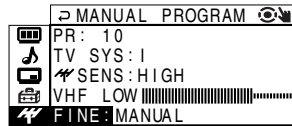


5 If the TV signal is too strong and the picture is distorted, you can adjust the TV reception sensitivity.

(1) Press **▲** or **▼** to select “SENS”, then press ENTER.

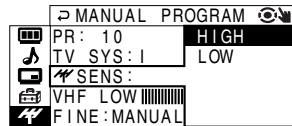

(2) Press **▲** or **▼** to select “LOW”, then press ENTER.

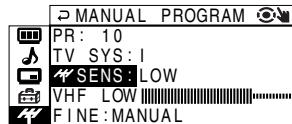


Note


- If you connect a VCR to ㉑ (antenna input), preset the signal output from the VCR to the program number 0 on the TV.
- “SENS” is available for KV-DR34M97 only.

■ Connecting optional components

 

 
Connecting to the video input terminal (→)

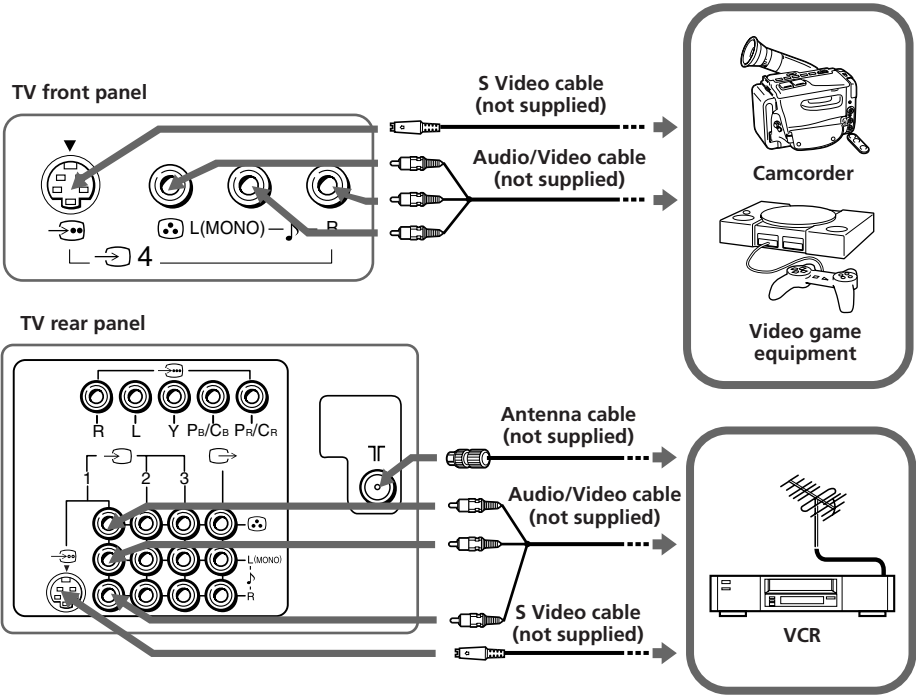


Connecting to the monitor output terminal (⇄)

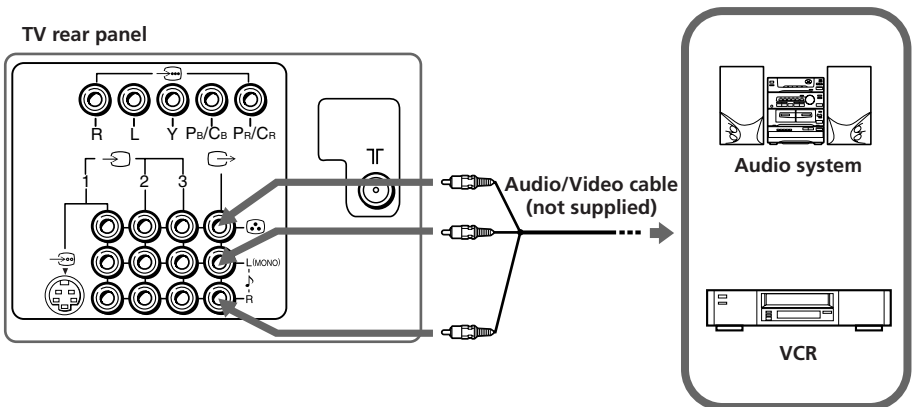

Connecting a DVD player to the component video input terminal ()


 
 
 

 

 
- 1 Using an audio cable, connect R and L under  (component video input) on your TV to the LINE OUT, AUDIO R and L output connectors on your DVD player.
- 2 Using a component video cable, connect Y, P_B/C_B, and P_R/C_R under  (component video input) on your TV to the COMPONENT VIDEO OUT Y, C_B, and C_R output connectors on your DVD player.
- 3 Press DVD on the remote to watch the  (component video input) and “DVD” will appear on your screen.

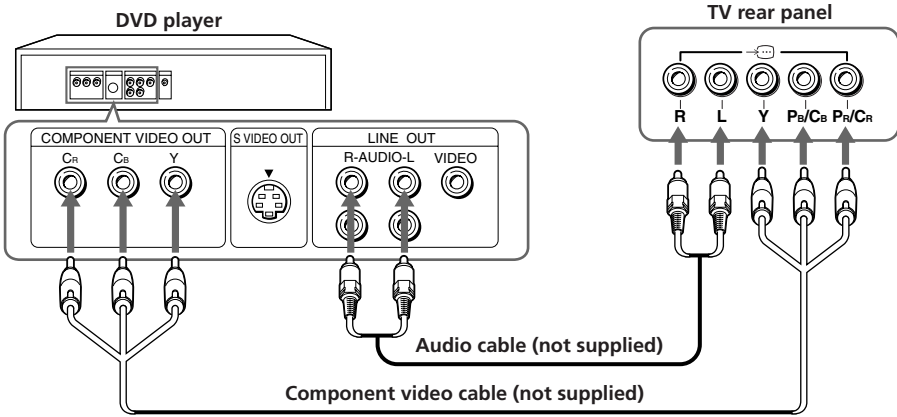

Notes


- Some DVD player terminals may be labeled differently:

| Connect | To (on the DVD player) |
|---------------------------------------|---|
| Y (green) | Y |
| P _B /C _B (blue) | C _B , P _B , C _b or B-Y |
| P _R /C _R (red) | C _R , P _R , C _r or R-Y |

- When both  (S video) and  (video) for  1 or  4 are connected at the same time,  (S video) is automatically selected. To view  (video), disconnect the S video cable.
- If you select “DVD” on your TV screen, the signal from the  (monitor output) jacks will not output properly. This does not indicate a malfunction.
- When receiving a progressive signal through the  (component video input), “PIP” is not available, and “DRC-MF” , “3D-NR” and “GAME MODE” are not selectable.

Troubleshooting

If you have any problem while viewing your TV, you can either use the Reset function or check the Troubleshooting guide below. If the problem persists, contact your Sony dealer.

 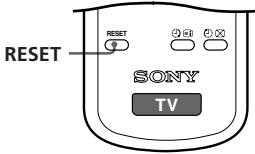
















Reset function

Press the RESET button on your remote control. Your TV will go blank for about half a second then the picture will reappear with "RESET" displayed on your TV screen for about 10 seconds.

Pressing RESET will set your TV to the factory setting, but certain problems may be solved.



Troubleshooting guide

| Symptom | Possible cause | Solutions | Page |
|--|---|---|------|
| Snowy picture  | <ul style="list-style-type: none"> The connection is loose or the cable is damaged. | <ul style="list-style-type: none"> Check the antenna cable and connection on the TV, VCR and at the wall. | 30 |
| | <ul style="list-style-type: none"> The antenna setup is inappropriate. | <ul style="list-style-type: none"> Check the antenna setup. Contact a Sony dealer for advice. | – |
| Noisy sound  | <ul style="list-style-type: none"> Channel presetting is inappropriate or incomplete. | <ul style="list-style-type: none"> Display the "CH PRESET" menu and select "MANUAL PROGRAM" to preset the channel again. | 28 |
| | <ul style="list-style-type: none"> Signal transmission is low. | <ul style="list-style-type: none"> Try using a booster. | – |
| Distorted picture  | <ul style="list-style-type: none"> Broadcast signals are too strong. | <ul style="list-style-type: none"> Display the "CH PRESET" menu and select "MANUAL PROGRAM". Then, select "SENS: LOW" (KV-DR34M97 only). | 29 |
| | | <ul style="list-style-type: none"> Turn off or disconnect the booster if it is in use. | – |
| Noisy sound  | <ul style="list-style-type: none"> The TV system setting is inappropriate. PIP sound is selected when PIP is displayed (KV-DR34M97 only). | <ul style="list-style-type: none"> Display the "CH PRESET" menu and select the appropriate TV system ("TV SYS"). | 28 |
| | | <ul style="list-style-type: none"> Press SOUND or . | 13 |
| Good picture  | <ul style="list-style-type: none"> PIP sound is selected when PIP is displayed (KV-DR34M97 only). | <ul style="list-style-type: none"> Press SOUND or . | 13 |
| Noisy sound  | | | |

| Symptom | Possible cause | Solutions | Page |
|---|---|--|---------|
| No picture  | <ul style="list-style-type: none"> The power cord, antenna or VCR is not connected. | <ul style="list-style-type: none"> Check the power cord, antenna and VCR connections. | 30 |
| | <ul style="list-style-type: none"> The TV is not turned on. | <ul style="list-style-type: none"> Press I/⏻ (power). Press Ⓞ (main power) on the TV to turn off the TV for about five seconds, then turn it on again. | 9 8 |
| No sound  | | | |
| Good picture  | <ul style="list-style-type: none"> The volume level is too low. | <ul style="list-style-type: none"> Press ◀ + to increase the volume level. | 8 |
| | <ul style="list-style-type: none"> The sound is muted. PIP sound is selected when PIP is displayed (KV-DR34M97 only). | <ul style="list-style-type: none"> Press ⓧ to cancel the muting. Press SOUND or 🗉. | 9 13 |
| No sound  | | | |
| Dotted lines or stripes  | <ul style="list-style-type: none"> There is local interference from cars, neon signs, hair dryers, power generators, etc. | <ul style="list-style-type: none"> Do not use a hair dryer or other equipment near the TV. Check the antenna setup. Contact a Sony dealer for advice. | - - |
| | | | |
| Double images or "ghosts"  | <ul style="list-style-type: none"> Broadcast signals are reflected by nearby mountains or buildings. | <ul style="list-style-type: none"> Use a highly directional antenna. Use the fine tuning ("FINE") function. | - 29 |
| | <ul style="list-style-type: none"> The antenna setup is inappropriate. | <ul style="list-style-type: none"> Check the antenna setup. Contact a Sony dealer for advice. | - |
| | <ul style="list-style-type: none"> Use of a booster is inappropriate. | <ul style="list-style-type: none"> Turn off or disconnect the booster if it is in use. | - |
| No color  | <ul style="list-style-type: none"> The color level setting is too low. | <ul style="list-style-type: none"> Display the "PICTURE" menu and select "ADJUST" of "PICTURE MODE", then adjust the "COLOR" level. | 21 |
| | <ul style="list-style-type: none"> The color system setting is inappropriate. | <ul style="list-style-type: none"> Display the "SETUP" menu and check the color system ("COLOR SYS") setting (usually set this to "AUTO"). | 25 |
| | <ul style="list-style-type: none"> The antenna setup is inappropriate. | <ul style="list-style-type: none"> Check the antenna setup. Contact a Sony dealer for advice. | - |






continue

continued

| Symptom | Possible cause | Solutions | Page |
|---|--|--|--------------------|
| <p>Picture slant</p>  | <ul style="list-style-type: none"> The magnetic disturbance from external speakers or other equipment, or the direction of the earth's magnetic field may affect the TV. | <ul style="list-style-type: none"> Keep external speakers or other electrical equipment away from the TV. Display the "SETUP" menu and adjust "PIC ROTATION" so that the picture position is optimal. | <p>–</p> <p>25</p> |
| <p>Abnormal color patches</p>  | <ul style="list-style-type: none"> The magnetic disturbance from external speakers or other equipment, or the direction of the earth's magnetic field may affect the TV. | <ul style="list-style-type: none"> Keep external speakers or other equipment away from the TV. Do not move the TV while the TV is turned on. Press Ⓚ (main power) on the TV to turn off the TV for about 15 minutes, then turn it on again to demagnetize the TV. | <p>–</p> |
| <p>TV cannot receive stereo broadcast sound.</p> | <ul style="list-style-type: none"> The stereo reception setting is inappropriate. | <ul style="list-style-type: none"> Press A/B until "AUTO" appears on the screen. | <p>16</p> |
| <p>or</p> | <ul style="list-style-type: none"> The connection is loose or the cable is damaged. | <ul style="list-style-type: none"> Check the antenna cable and connection on the TV, VCR and on the wall. | <p>30</p> |
| <p>Stereo broadcast sound switches on and off or is distorted.</p> | <ul style="list-style-type: none"> The antenna setup is inappropriate. | <ul style="list-style-type: none"> Check the antenna setup. Contact a Sony dealer for advice. | <p>–</p> |
| <p>The Ⓚ (standby) indicator on your TV flashes red several times after every three seconds.</p> | <ul style="list-style-type: none"> Your TV's self-diagnosis function indicates the possible problems. | <ul style="list-style-type: none"> Count the number of times the Ⓚ (standby) indicator flashes. Press Ⓚ (main power) to turn off your TV. Contact your nearest Sony service center. | <p>–</p> |
| <p>Cannot play shooting games.</p> | <ul style="list-style-type: none"> Some shooting games which involve pointing a light beam at the TV screen with an electronic gun or rifle cannot be used with your TV. For details, see the instruction manual supplied with the video game software. | <p>—</p> | <p>–</p> |

| Symptom | Possible cause | Solutions | Page |
|---|--|-----------|------|
| TV cabinet creaks. | <ul style="list-style-type: none"> Changes in room temperature sometimes make the TV cabinet expand or contract, causing a noise. This does not indicate a malfunction. | — | — |
| A small “boom” sound is heard when the TV is turned on. | <ul style="list-style-type: none"> The TV’s demagnetizing function is working. This does not indicate a malfunction. | — | — |

 ■ Specifications

| | KV-DR34M97 | KV-DR29M93 | Note |
|---|---|-----------------|--|
| Power requirements | 220-240 V AC, 50/60 Hz | | |
| Power consumption (W) | Indicated on the rear of the TV | | |
| Television system | B/G, I, D/K, M | | |
| Color system | PAL, PAL 60, SECAM, NTSC3.58, NTSC4.43 | | |
| Stereo/Bilingual system | NICAM Stereo/Bilingual B/G, I; A2 Stereo/Bilingual B/G | | |
| Channel coverage | | | |
| B/G | VHF : E2 to E12 UHF : E21 to E69 CATV : S01 to S03, S1 to S41 | | |
| I | UHF : B21 to B68 CATV : S01 to S03, S1 to S41 | | |
| D/K | VHF : C1 to C12, R1 to R12 UHF : C13 to C57, R21 to R60 CATV : S01 to S03, S1 to S41, Z1 to Z39 | | |
| M | VHF : A2 to A13 UHF : A14 to A79 CATV : A-8 to A-2, A to W+4, W+6 to W+84 | | |
| ⌚ (Antenna) | 75-ohm external terminal | | |
| Audio output (Speaker) | 6W + 6W | | |
| 3D WOOFER | 15W | | |
| Number of terminal | | | |
|  (Video) | Input: 4 | Output: 1 | Phono jacks; 1 Vp-p, 75 ohms |
|  (Audio) | Input: 4 | Output: 1 | Phono jacks; 500 mVrms |
|  (S Video) | Input: 2 | | Y: 1 Vp-p, 75 ohms, unbalanced, sync negative C: 0.286 Vp-p, 75 ohms |
|  (Component Video) | Input: 1 | | Phono jacks; Y: 1 Vp-p, 75 ohms, sync negative P _B /C _B : 0.7 Vp-p, 75 ohms P _R /C _R : 0.7 Vp-p, 75 ohms Audio: 500 mVrms |
|  (Headphone) | Output: 1 | | Stereo minijack |
| Picture tube | 34 in. | 29 in. | |
| Tube size (cm) | 86 | 72 | Measured diagonally |
| Screen size (cm) | 80 | 68 | Measured diagonally |
| Dimensions (w/h/d, mm) | 894 × 690 × 569 | 786 × 596 × 514 | |
| Mass (kg) | 85 | 57 | |

Design and specifications are subject to change without notice.

<http://www.sony.net/>

Sony Corporation