

SONY

Memory Card Recorder Quick Start Guide



ICD-LX30

4-297-165-11 (1)

© 2011 Sony Corporation Printed in China



Welcome to your new Sony memory card recorder!

This is the Quick Start Guide, which provides you with instructions on the basic operations of the memory card recorder.

Please read it carefully. We hope you enjoy using your new Sony memory card recorder.

Please refer to the operating instructions stored on the supplied SD memory card for details of functions.

Checking the contents of the package

- Memory card recorder (1)
- LR03 (size AAA) alkaline batteries (2)
- Hand Strap (1)
The strap is attached via the strap hole of the memory card recorder.
- AC adaptor (1)
- SD memory card (2GB) (1)
- Carrying pouch (1)
- Operating Instructions (Stored in the supplied SD memory card)
- Quick Start Guide (1)

When you format the supplied SD memory card, the operating instructions stored in the supplied SD memory card will also be erased. To get another copy of the operating instructions, please visit the Sony support home page:

For customers in the U.S.A.:

<http://www.sony.com/recordersupport>


For customers in Canada:

<http://www.sony.ca/ElectronicsSupport>

<http://fr.sony.ca/ElectronicsSupport>


Getting Started

1 Insert two batteries.

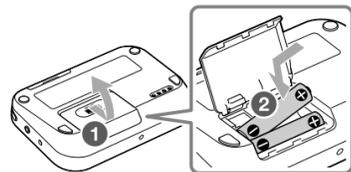

- Slide and lift the battery compartment lid.
- Insert LR03 (size AAA) alkaline batteries with correct polarity, and close the lid.

2 Insert the supplied SD memory card.

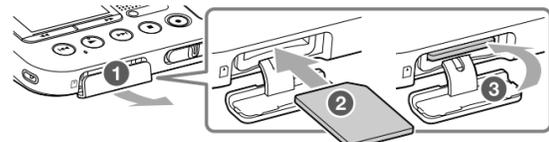


- Open the cover of the memory card slot.
- Insert a memory card securely to the end of the slot until it clicks into place.
- Close the cover of the memory card slot.

Note

The memory card recorder does not have an internal memory. Be sure to insert the memory card before recording.

3 Slide the HOLD-POWER switch in the direction of "POWER" and keep it there to turn on the memory card recorder.

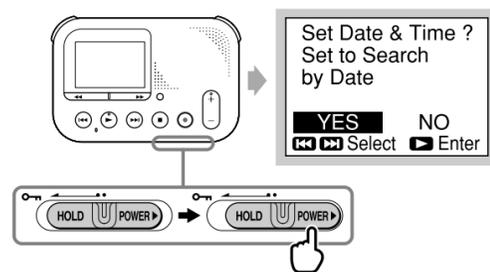


Hint

The HOLD-POWER switch returns to the center position automatically when you release it.


4 Press ◀ or ▶ to select "YES," then press ▶ to set the clock settings.

The clock setting screen appears.

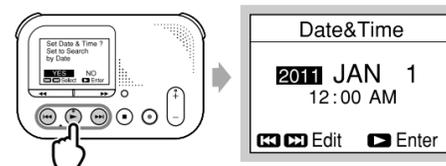

5 Set the year, month, day, hour, and minute in sequence using ◀ or ▶ and ▶.

When you set the minute, the "Setting Completed" message is displayed.

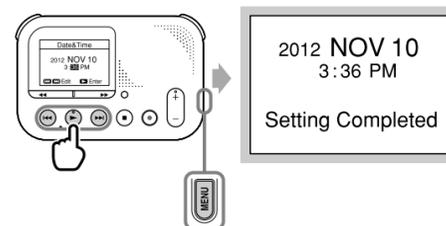

Hint


You can return to the previous window by pressing MENU if you make a mistake in the clock settings.

Let's use the memory card recorder

This section explains how to play back the test recording file immediately. The recorded files are not erased if you record the next file within few seconds.


1 Press ○ to start recording.

The ○ button is lighting up and the memory card recorder enters the recording mode.

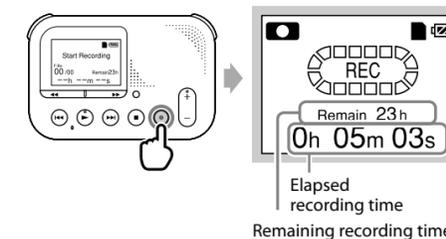

2 Press ◻ to stop recording.


"Please Wait" appears in the display window, then the recording stops.

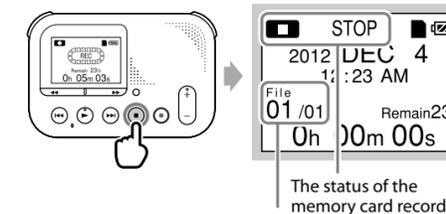

The number of the recorded file (in the sequence of files that were recorded on the same day)/Displays the total number of files that were recorded on the same date

3 Press ▶ to play back.


The test recording starts playing back.

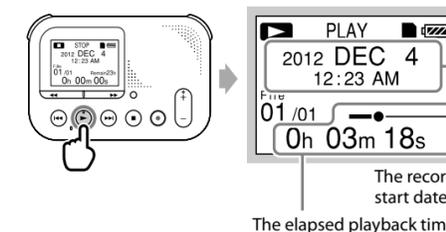

4 Press ◻ to stop the playback.

The test recording stops.

Turning the power off

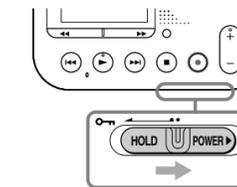


Slide the HOLD-POWER switch in the direction of "POWER" and keep it there until "Power Off" animation appears. The memory card recorder will turn off in a few seconds.

Hint


When you are not going to use the memory card recorder for a long time, we recommend to turn off the memory card recorder. When the memory card recorder is in the stop mode, and you leave the memory card recorder without attempting an operation for approx. 30 minutes, the auto power off function will take effect.

About memory card access indicator

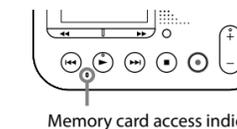

The memory card access indicator is flashing in orange when the memory card recorder is accessing the memory card. Do not remove the SD memory card, batteries, or disconnect the AC adaptor while the memory card access indicator is flashing.

To set the beep sound to OFF

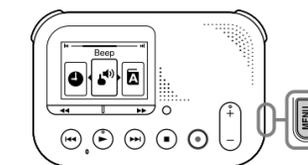


Press MENU to enter the menu mode. Press ◀ or ▶ to select "Beep," then press ○. Press ◀ or ▶ to select "OFF," then press ○.


Searching the recorded files

1 Press SEARCH.

The date selection screen appears.

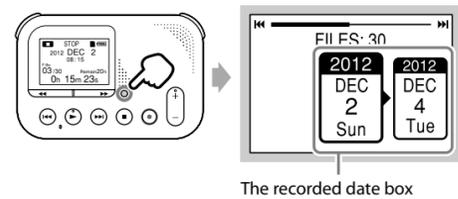


2 Press ⏪ or ⏩ to select the date when you recorded the desired file, then press ▶.

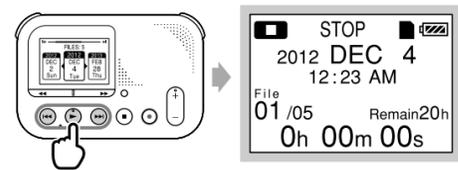

3 Press ⏪ or ⏩ to select a file.


Press ⏪ to select a more recent file.
Press ⏩ to select an earlier file.

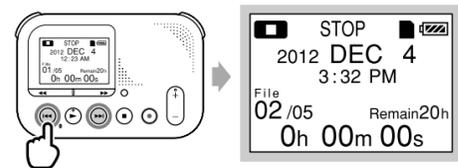


Playing back the searched file

1 Press ▶ to start playing back.

The selected file starts playing back.

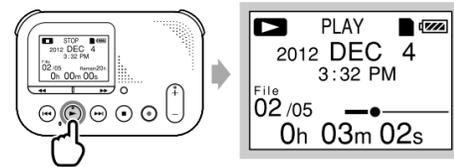


2 Press VOL +/- to adjust the volume.

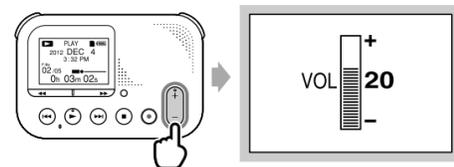

3 Press ■ to stop the playback.


The selected file stops.

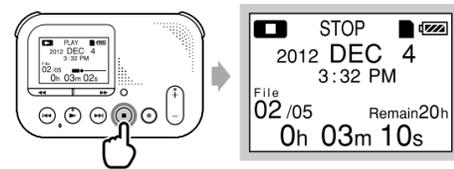


Erasing the searched file

1 Press ERASE.

"Erase?" appears and the specified file is played back for confirmation.

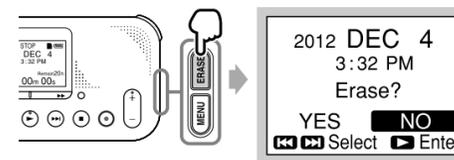


2 Press ⏪ or ⏩ to select "YES."

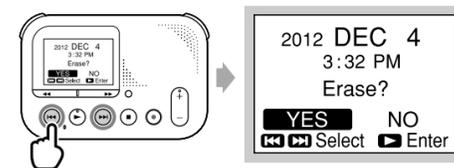

3 Press ▶.

The "Erasing..." animation appears in the display window and the selected file will be erased.

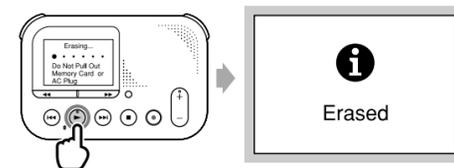

Hint

When a file is erased, the remaining files will advance so that there will be no space between files.

Owner's Record

The model number is located at the rear panel and the serial number is located inside the battery compartment. Record these numbers in the space provided below. Refer to these numbers whenever you call upon your Sony dealer regarding this product.

Model No. _____

Serial No. _____

Capacity of the supplied SD memory card with the memory card recorder (User available capacity)

2 GB (approx. 1.80 GB = 1,932,734,976 Byte)

A part of the memory capacity is used as a management area.

The following FCC statement applies only to the version of this model manufactured for sale in the USA. Other versions may not comply with FCC technical regulations.

INFORMATION

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.