

B

Making a wireless connection between this system and a wireless LAN router with Xperia/iPhone application "NS Setup"

Download the application "NS Setup" to your smartphone and perform setup by following the steps below in order to make a connection between this system and your wireless LAN router.

- 1 Check that the network (LAN) cable is **disconnected** from the system then connect the power cord.




- 2 Make sure that your wireless LAN router is turned on then have your SSID and Security key on the space below.

For details, refer to the operating instructions of the wireless LAN router.

SSID	
Security key	

SSID: ■■■■■■
Security key: ■■■■■■

- 3 Press the I/⏻ button to turn the system on.

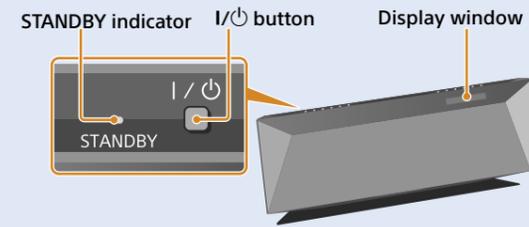

- 4 Check that the STANDBY indicator lit in red turns off and that starts flashing in the display window.

It may take several minutes until starts flashing. Once you see the indicator start flashing, perform setup by using the smartphone application "NS Setup."

For a user of Xperia → [Setup in Xperia](#)


For a user of iPhone → [Setup in iPhone](#)

Setup in Xperia

- 1 Download the free application "NS Setup" from "Google Play."
- 2 Perform setup by using the application "NS Setup."



The system is preparing for the wireless setting. Wait several minutes until the next display appears.

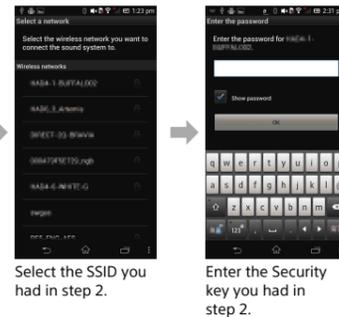

The system is checking whether or not the setup has been performed properly. Wait several minutes until the next display appears. If in "Troubleshooting" below appears, follow its instructions.



Playing music stored in Xperia

- 1 Launch ([WALKMAN] application).
- 2 Tap the icon and select [SONY:CMT-BT80W(B)XXXXXX] to play music.




"NETWORK" appears on the display window of the system during music play.

Setup in iPhone

- 1 Download the free application "NS Setup" from "Apple Store."
- 2 Perform setup by using the application [NS Setup].



The system is preparing for the wireless setting. Wait several minutes until the next display appears. If in "Troubleshooting" below appears, follow its instructions.

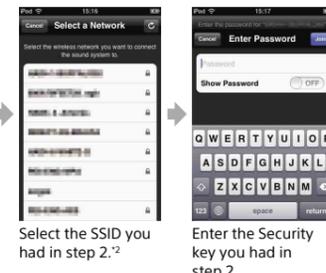


The system is checking whether or not the setup has been performed properly. Wait several minutes until the next display appears. If or in "Troubleshooting" below appears, follow its instructions.



Playing music stored in iPhone

- 1 Launch ([Music] application).
- 2 Tap the icon and select [SONY:CMT-BT80W(B)XXXXXX] to play music.

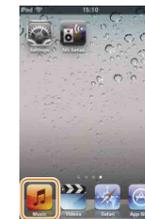


"AirPlay" appears on the display window of the system during music play.

*1 It may take several minutes until [Sony_Wireless_Audio_Setup] appears. If it does not appear, reset the system by following "To reset the system" in "Troubleshooting." *2 If the SSID does not appear, tap the icon at the upper right to update the display.

Troubleshooting

The displays below may appear during setup. In these cases, follow their instructions.

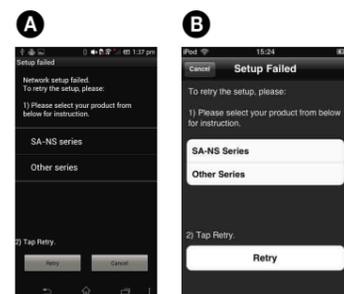

If **A** or **B** appears, reset the system by following the steps in "To reset the system." Then perform the setup operations again from the first step of **2** in "Setup in Xperia" or "Setup in iPhone."



If **C** appears, perform the setup operations again from the first step of **2** in "Setup in iPhone."



If **D** appears, operate by following the instructions on the display.

If the setup does not become successful after that or if "NO CONNECT" appears in the display window of the system, reset the system by following the steps in "To reset the system."

To reset the system

Reset the system as follows.

Also, if "Sony_Wireless_Audio_Setup" is not displayed during setup of iPhone, reset the system.

- 1 Disconnect the power cord from the wall outlet and make sure that the STANDBY indicator does not light. Then reconnect the power cord and turn the system on.
- 2 Hold the (stop) and I/⏻ buttons of the system pressed until "ALLRESET" appears.

