


MHC-M80D is the model used for illustration purposes.  
MHC-M80D 型號用作說明用途。

© 2018 Sony Corporation  
Printed in China

## Connecting the system to your TV 將系統連接至您的電視機


### To watch video 要觀看視頻

Connect the High Speed HDMI Cable with Ethernet (not supplied) to the system. For further operations, refer to "Connecting the TV" in the supplied operating instructions.  
將 High Speed HDMI Cable with Ethernet (無附帶) 連接至系統。有關更多操作，請參閱附帶的使用說明書中的“連接電視機”。

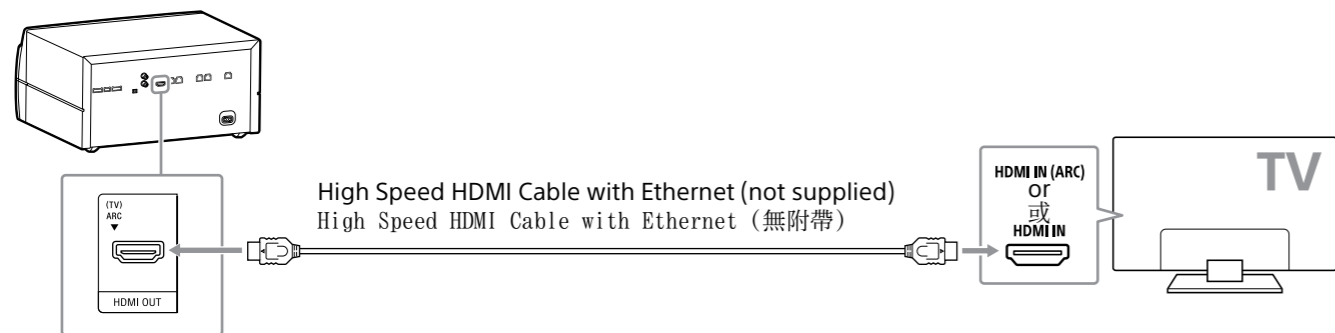

### To listen to TV sound via the system 通過系統聆聽電視機的聲音

Choose one of the connections below (A or B). For further operations, refer to "Connecting the TV" in the supplied operating instructions.  
選擇以下的一種連接 (A 或 B)。有關更多操作，請參閱附帶的使用說明書中的“連接電視機”。

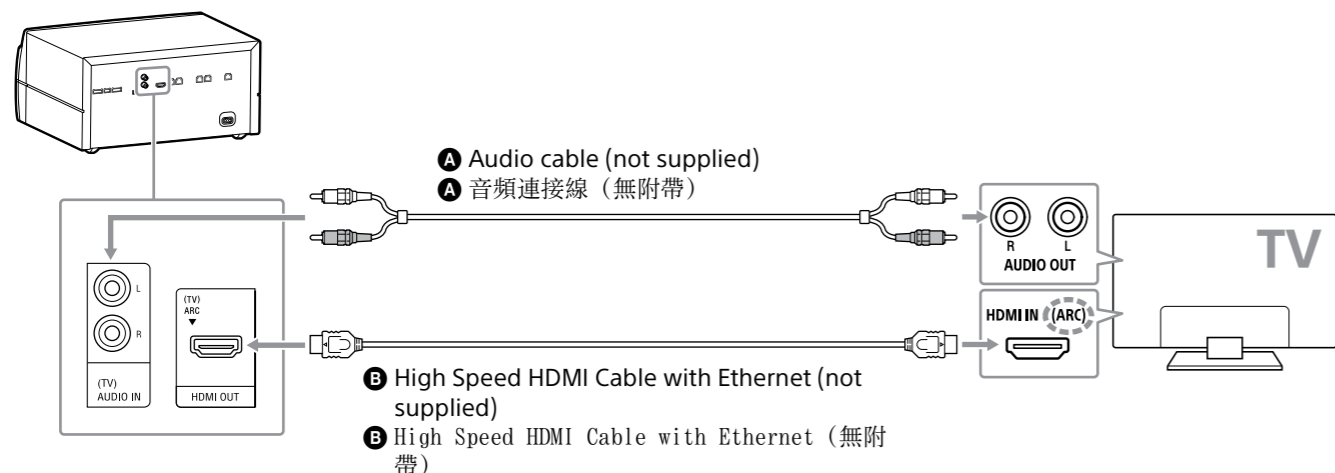


Please refer to the supplied operating instructions for details on the disc/USB playback and other functions.

有關光碟/USB 播放及其它功能的詳情，請參閱附帶的使用說明書。



## Listening to music from a BLUETOOTH device (Pairing and connecting) 聆聽來自藍牙裝置的音樂 (配對和連接)

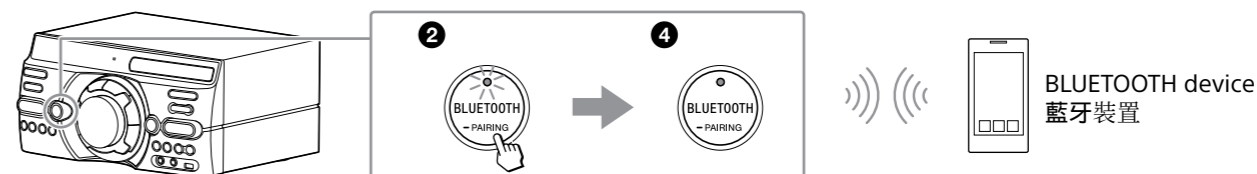

Be sure to place the BLUETOOTH device within 1 meter from the unit.

- Turn on the system and press FUNCTION on the unit repeatedly to select "BLUETOOTH". When there is no pairing information, the system enters the pairing mode automatically and the BLUETOOTH indicator flashes quickly. Proceed to step 3.
- Hold down - PAIRING on the unit for more than 2 seconds. The BLUETOOTH indicator flashes quickly.
- Turn on the BLUETOOTH function on the BLUETOOTH device, and select the system's name (for example, "MHC-M80D").
- When the BLUETOOTH connection is established, the BLUETOOTH indicator lights up.
- Start playback on the BLUETOOTH device.
- Adjust the volume.

Refer to the supplied operating instructions for details on other BLUETOOTH settings.

### On listening to music on PC

- Make sure that your PC has the BLUETOOTH function and activate the BLUETOOTH function on your PC. For details, refer to the operating instructions of the PC.
- Set the speaker setting on the PC to on mode. If the mute (off) mode is set, the system will not output sound.

— Mute (off) mode



— On mode



If the sound is still not output from the system, click the volume icon and adjust the volume.

務必將藍牙裝置放在離本機 1 米內之處。

- 開啓系統，然後重複按本機上的 FUNCTION 以選擇“BLUETOOTH”。若沒有配對信息，系統會自動進入配對模式，藍牙指示器快速閃爍。進入步驟 3。
- 按住本機上的 - PAIRING 超過 2 秒鐘。藍牙指示器快速閃爍。
- 開啓藍牙裝置上的藍牙功能，然後選擇系統的名稱（例如，“MHC-M80D”）。
- 當藍牙連接建立時，藍牙指示器亮起。
- 開始在藍牙裝置上播放。
- 調節音量。

有關其它藍牙設定的詳情，請參閱附帶的使用說明書。

### 在 PC 上聆聽音樂

- 確保您的 PC 具備藍牙功能並在您的 PC 上啓動藍牙功能。詳情請參閱 PC 的使用說明書。
- 將 PC 上的揚聲器設定設為開啓模式。如果已設定靜音（關閉）模式，揚聲器將不輸出聲音。

— 靜音（關閉）模式



— 開啓模式



如果聲音仍不從系統輸出，點擊音量圖標並調整音量。


MHC-M80D ialah model yang digunakan untuk tujuan ilustrasi.

GB  
CT  
MY

### Menyambungkan sistem ke TV anda


#### Untuk menonton video

Sambungkan High Speed HDMI Cable with Ethernet (tidak dibekalkan) ke sistem. Untuk mengetahui pengendalian lanjut, rujuk "Menyambungkan TV" dalam arahan pengendalian yang dibekalkan.

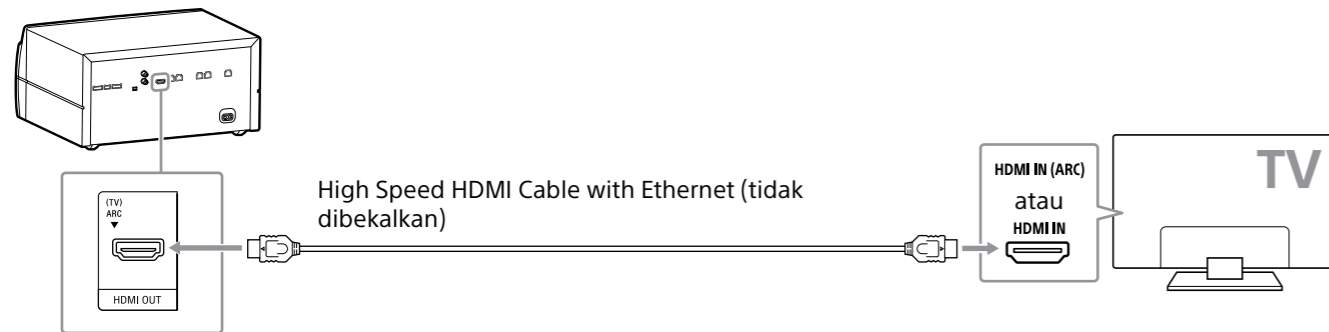

#### Untuk mendengar bunyi TV melalui sistem


Pilih salah satu sambungan di bawah (A atau B). Untuk mengetahui pengendalian lanjut, rujuk "Menyambungkan TV" dalam arahan pengendalian yang dibekalkan.

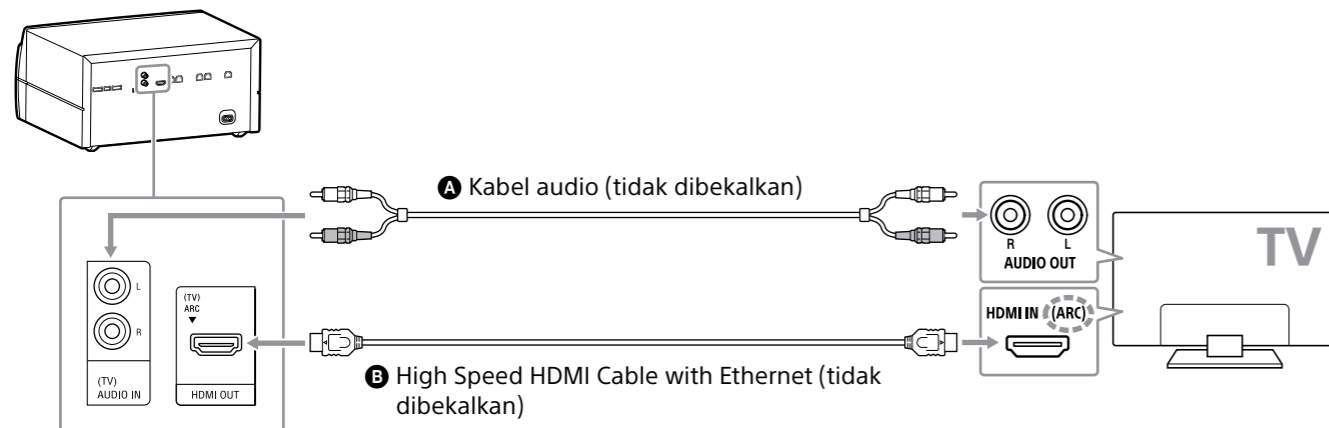

Sila rujuk arahan pengendalian yang dibekalkan untuk mendapatkan butiran tentang main balik cakera/USB dan fungsi lain.



### Mendengar muzik daripada peranti BLUETOOTH (Pasangan dan penyambungan)

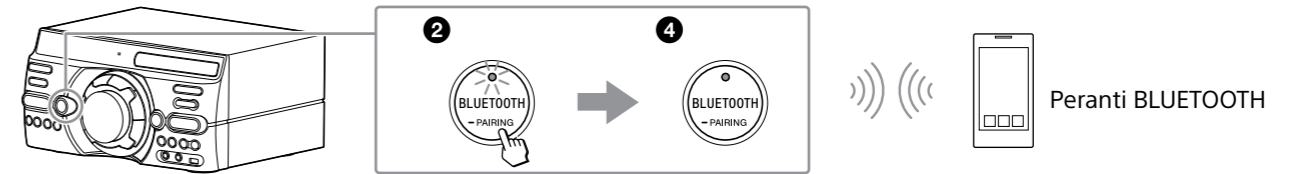

Pastikan peranti BLUETOOTH diletakkan dalam lingkungan 1 meter dari unit.

- 1 Hidupkan sistem dan tekan FUNCTION pada unit berulang kali untuk memilih "BLUETOOTH". Apabila tiada maklumat pasangan, sistem akan memasuki mod berpasangan secara automatik dan penunjuk BLUETOOTH akan berkelip dengan cepat. Teruskan ke langkah 3.
- 2 Tahan PAIRING pada unit selama lebih daripada 2 saat. Penunjuk BLUETOOTH berkelip cepat.
- 3 Hidupkan fungsi BLUETOOTH pada peranti BLUETOOTH, kemudian pilih nama sistem (contohnya, "MHC-M80D").
- 4 Apabila sambungan BLUETOOTH diwujudkan, penunjuk BLUETOOTH menyala.
- 5 Mulakan main balik pada peranti BLUETOOTH.
- 6 Laraskan kelantangan.

Rujuk arahan pengendalian yang dibekalkan untuk mendapatkan butiran pada tetapan BLUETOOTH yang lain.

#### Tentang mendengar muzik pada PC

- Pastikan PC anda mempunyai fungsi BLUETOOTH dan aktifkan fungsi BLUETOOTH pada PC anda. Untuk butiran, rujuk kepada arahan pengendalian bagi PC.
- Tetapkan pembesar suara pada PC kepada mod hidup. Jika mod redam (mati) ditetapkan, sistem tidak akan mengeluarkan bunyi.

— Mod redam (mati)



— Mod hidup



Jika bunyi masih tidak dikeluarkan daripada sistem, klik ikon kelantangan dan laraskan kelantangan.